

RNS12/20 - WIRING DIAGRAM

CAUTION: DISCONNECT POWER BEFORE WORKING
ON ELECTRICAL CIRCUITRY

SEE SERIAL PLATE
FOR VOLTAGE

