

Wexiödisk^W

POTWASHER WITH GRANULATE WD-90GR FLEX & WD-90GR HC

(Translation of original documentation)



Read the manual before using the machine!

Spare parts manual



1. Spare parts	1
1.1 General Information and safety	1
1.2 Signs	2
1.3 Cover plates, legs	4
1.4 Electrical cabinets	6
1.5 Door	8
1.6 Cold water connection	10
1.7 Hot water connection	12
1.8 Tank	14
1.9 Tank electrical components	16
1.10 Booster heater 400V 9kW	18
1.11 Booster heater 230V 9kW (optional)	20
1.12 Booster heater 200V 9kW (optional)	22
1.13 Booster heater 440V 9kW (optional) (marine)	24
1.14 Booster heater, steam (optional)	26
1.15 Drive	28
1.16 Washing pumps with connections	30
1.17 Drain/waste pipe connection	32
1.18 Drain pump (optional)	34
1.19 Booster pump (option)	36
1.20 Break tank, smst (optional)	38
1.21 Break tank (optional)	40
1.22 Pump P65-18	42
1.23 Pump 1226	44
1.24 Accessories WD90GR FLEX/HC	46
1.25 Accessories WD90GR FLEX	48
1.26 Accessories WD90GR HC	50
1.27 Extra equipment WD-90GR FLEX (optional)	52
1.28 Extra equipment WD-90GR FLEX (optional)	54
1.29 Extra equipment WD-90GR FLEX/HC (optional)	56
1.30 Sorting bench and Cleaning gun with hose, Extra equipment WD-90GR FLEX/HC (optional)	58
1.31 Trolley, Extra equipment WD-90GR FLEX/HC (optional)	60

1. Spare parts

1.1 General Information and safety




Read the instructions in the manuals INSTALLATIONS AND USER MANUAL and SERVICE MANUAL carefully as these contain important information regarding the correct, effective and safe installation, use and servicing of the machine. Be especially attentive to the chapter GENERAL INSTRUCTIONS and SAFETY INSTRUCTIONS. Service personnel should have access to all documentation for the machine.

If an item does not have a part number, it has a dedicated section in the spare parts manual or it is an electrical component. Electrical components must always be checked against the machine's wiring diagram.

Items that have an * in front of their description are included in a complete part but can also be purchased separately.


1.2 Signs

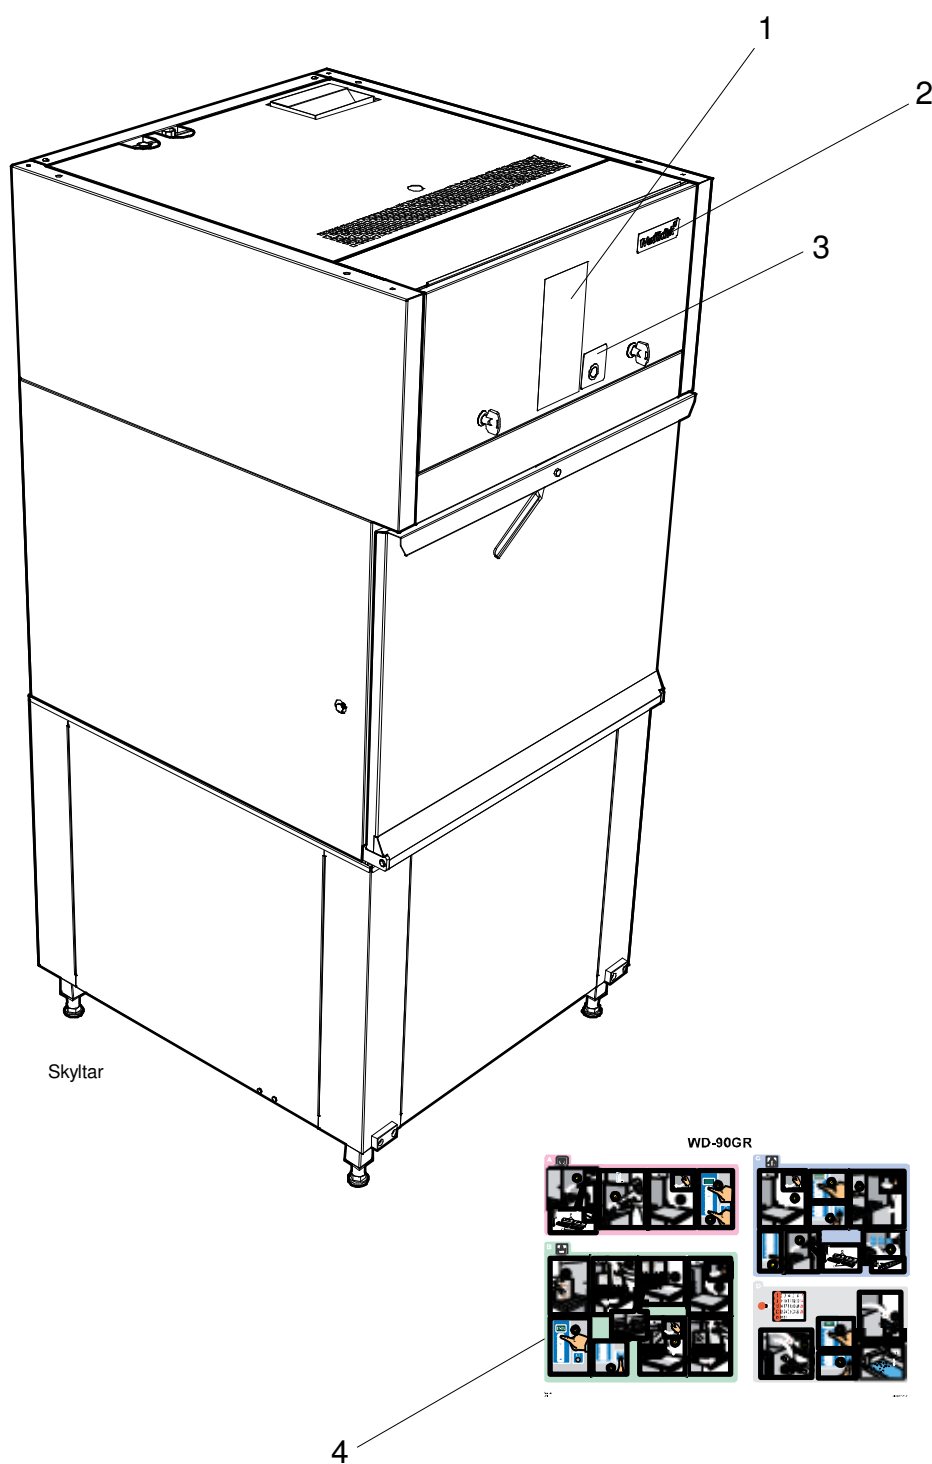

Spare parts

Signs			
Item	WD no.	Description	Comment
1	WD27310.01	Panel sign	Wexiödisk, Comenda
1	WD27310.02	Panel sign	Metos, Rhima
2	WD45941.31	ID plate	Wexiödisk, Comenda
2	WD44451.31	ID plate	Metos
2	WD44586.31	ID plate	Rhima
3	WD46391.01	Rinse, start button	Wexiödisk, Comenda
3	WD46391.02	Rinse, start button	Metos, Rhima
4	WD724.6007	Quick guide	


1.3 Cover plates, legs

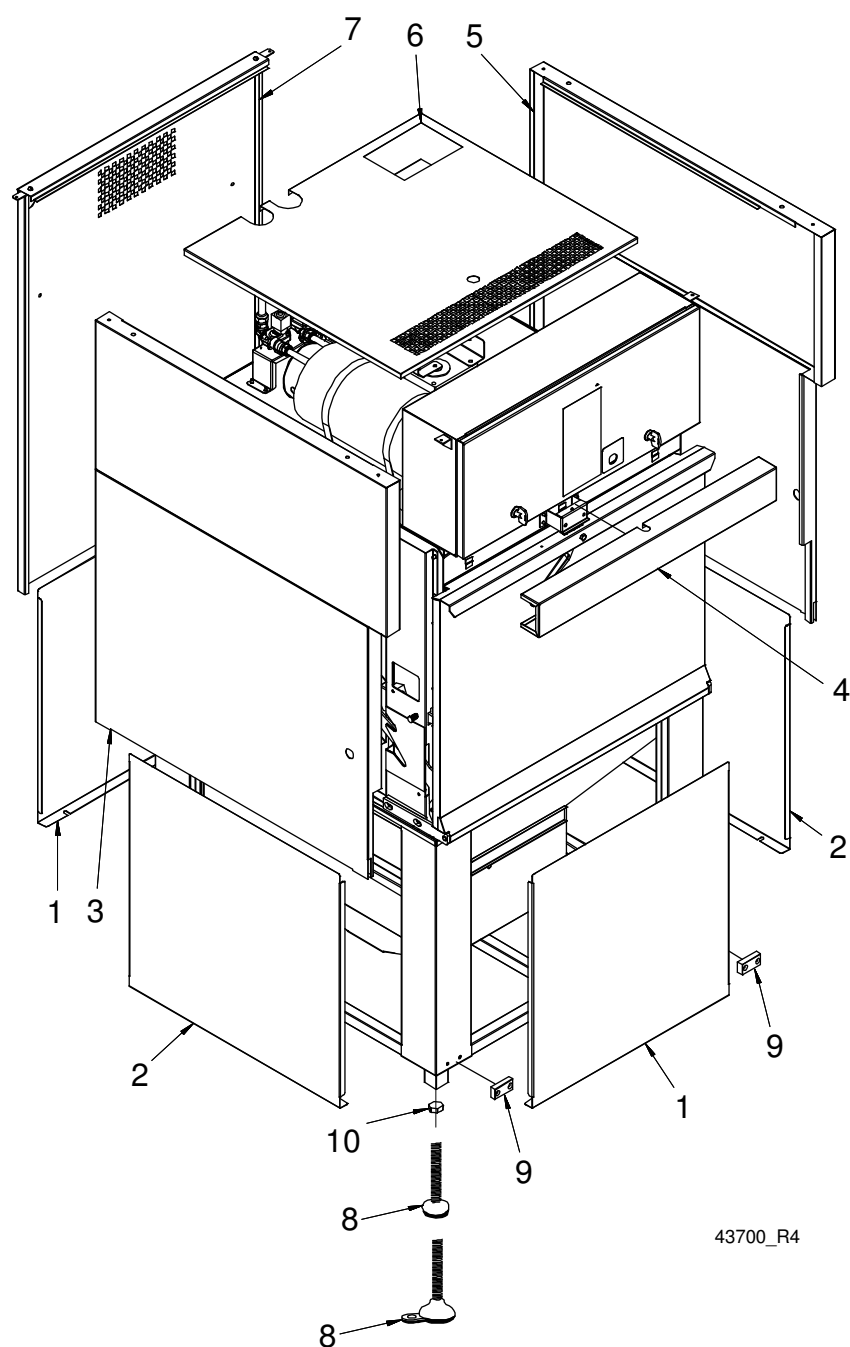

Spare parts

Cover plates, legs			
Item	WD no.	Description	Comment
1	WD36369.31	Cover plate	
2	WD36368.31	Cover plate	
3	WD23931.02	Cover plate, left	
4	WD23614.01	Cover plate, front	
5	WD23931.01	Cover plate, right	
6	WD23632.31	Roof plate	
7	WD23611.31	Cover plate, back	
8	WD718.0507	Plastic foot	
8	WD718.0511	Plastic foot	Marine
9	WD43616.31	Stop lug	
10	WD700.0924	Nut	


1.4 Electrical cabinets

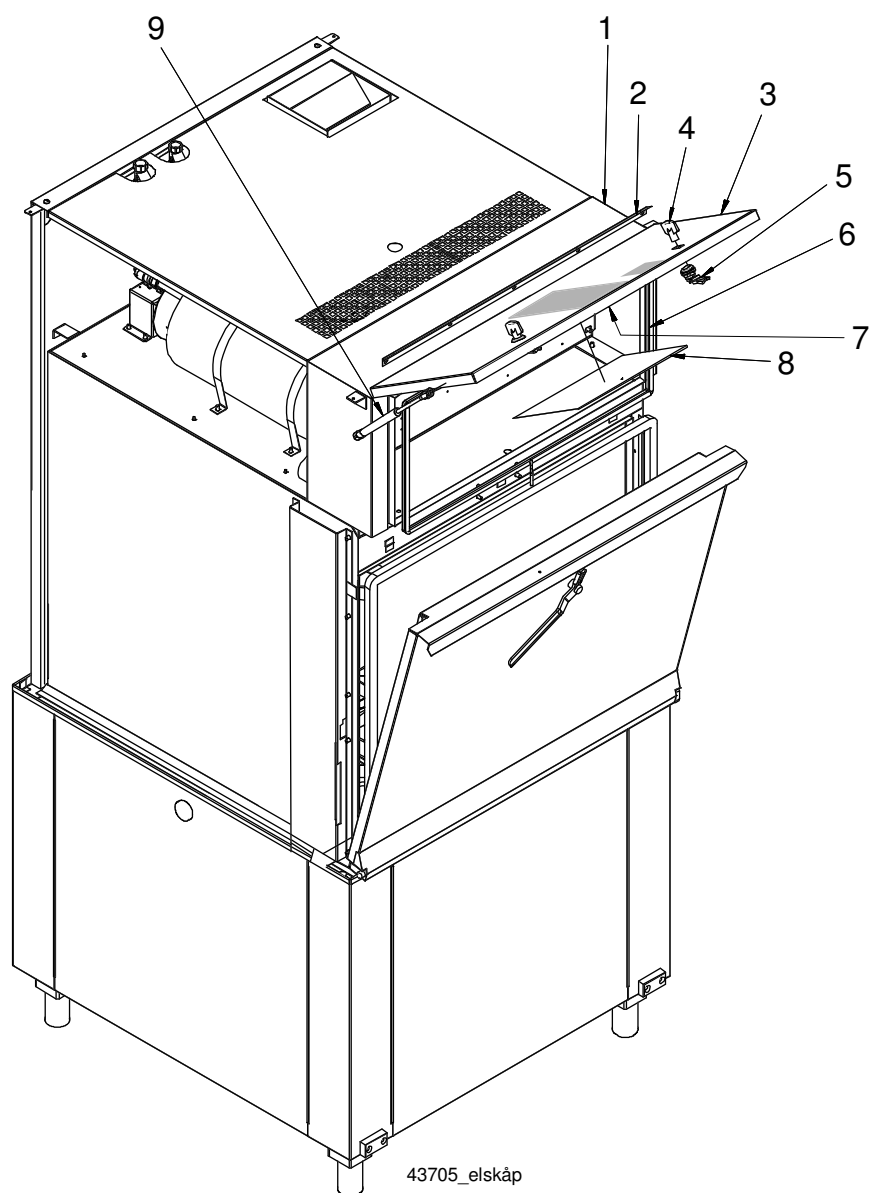

Spare parts

Electrical cabinets			
Item	WD no.	Description	Comment
1	WD23609.01	Electric cabinet, Cpl	
2	WD43553.31	* Hinge	
3	WD27309.31	* Door	
4	WD792.0211	Key	
5	WD792.0202	Lock	
6	WD719.0521	Sealing strip	L=2m
7		CPU + I/O card	See the machine's wiring diagram
8	WD724.0502	Plastic pocket	
9	WD713.0504	Gas spring	200N


1.5 Door

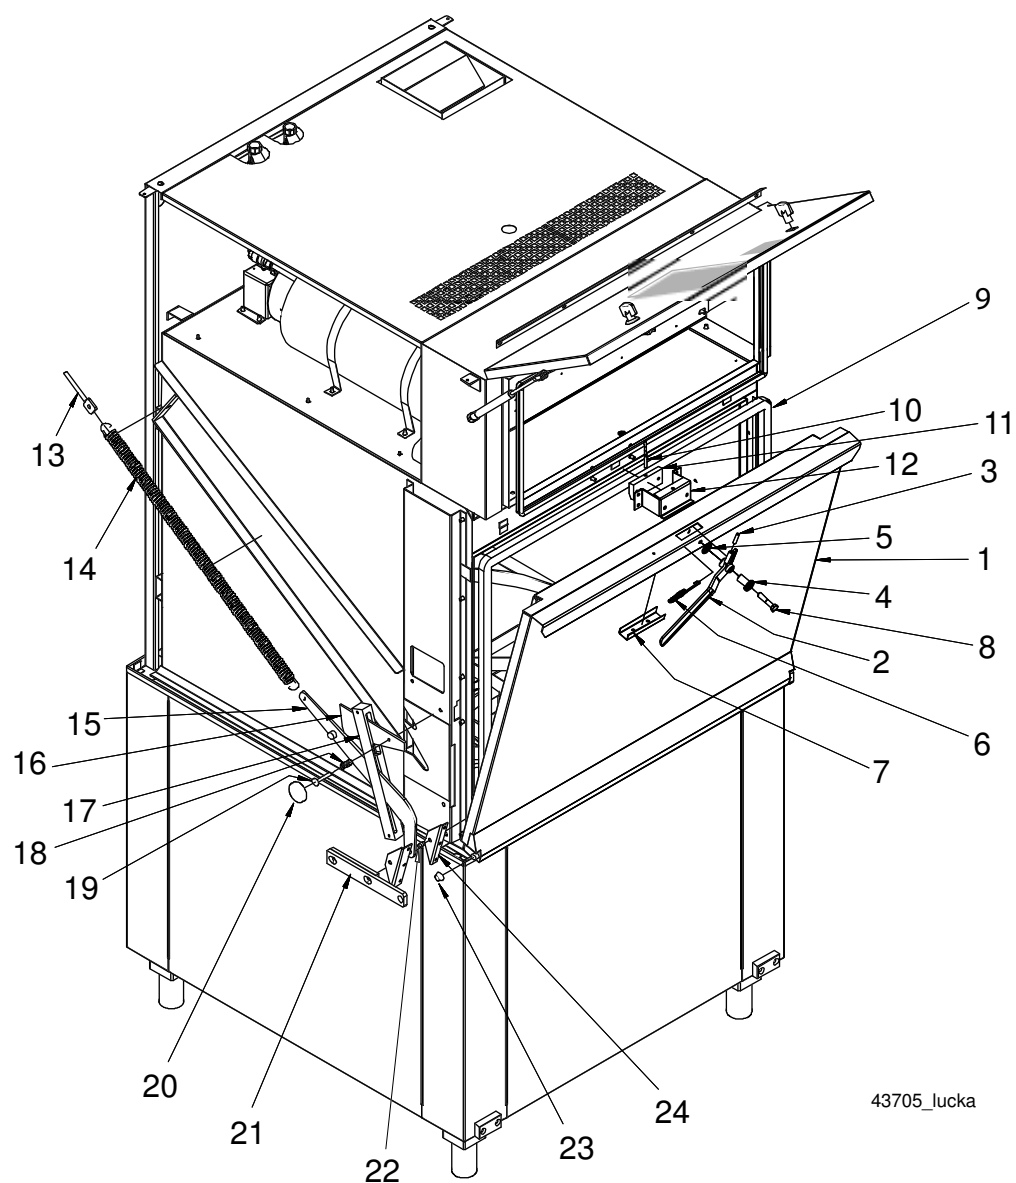

Spare parts

Door			
Item	WD no.	Description	Comment
1	WD23605.75	Door, Cpl	
2	WD36448.01	* Locking handle	
3	WD60219830	** Magnet	6x24mm
4	WD04825.31	* Bushing handle	
5	WD04825.33	* Washer handle	
6	WD04873.31	* Door lock spring	
7	WD04864.31	* Door spring protection	
8	WD700.0138	Screw	
9	WD307128.31	Seal	
9	WD307128.32	Seal	
10		Magnetic switch	See the machine's wiring diagram
11	WD43577.31	Locking plate	
12	WD36338.31	Lock abutment	
13	WD43621.01	Spring compressor	
14	WD04811.31	Tension spring	4x25x550mm
15	WD36330.02	Link door	
16	WD36331.31	Locking device	
17	WD36344.31	Slide bar	
18	WD04606.33	Spring + door	
19	WD43561.01	Push button	
20	WD719.1331	Rubber plug	
21	WD36343.01	Hinge, Cpl	
22	WD04865.31	Link	
23	WD710.0138	Plain bearing	
24	WD23615.01	Bracket, door	

 
1.6 Cold water connection

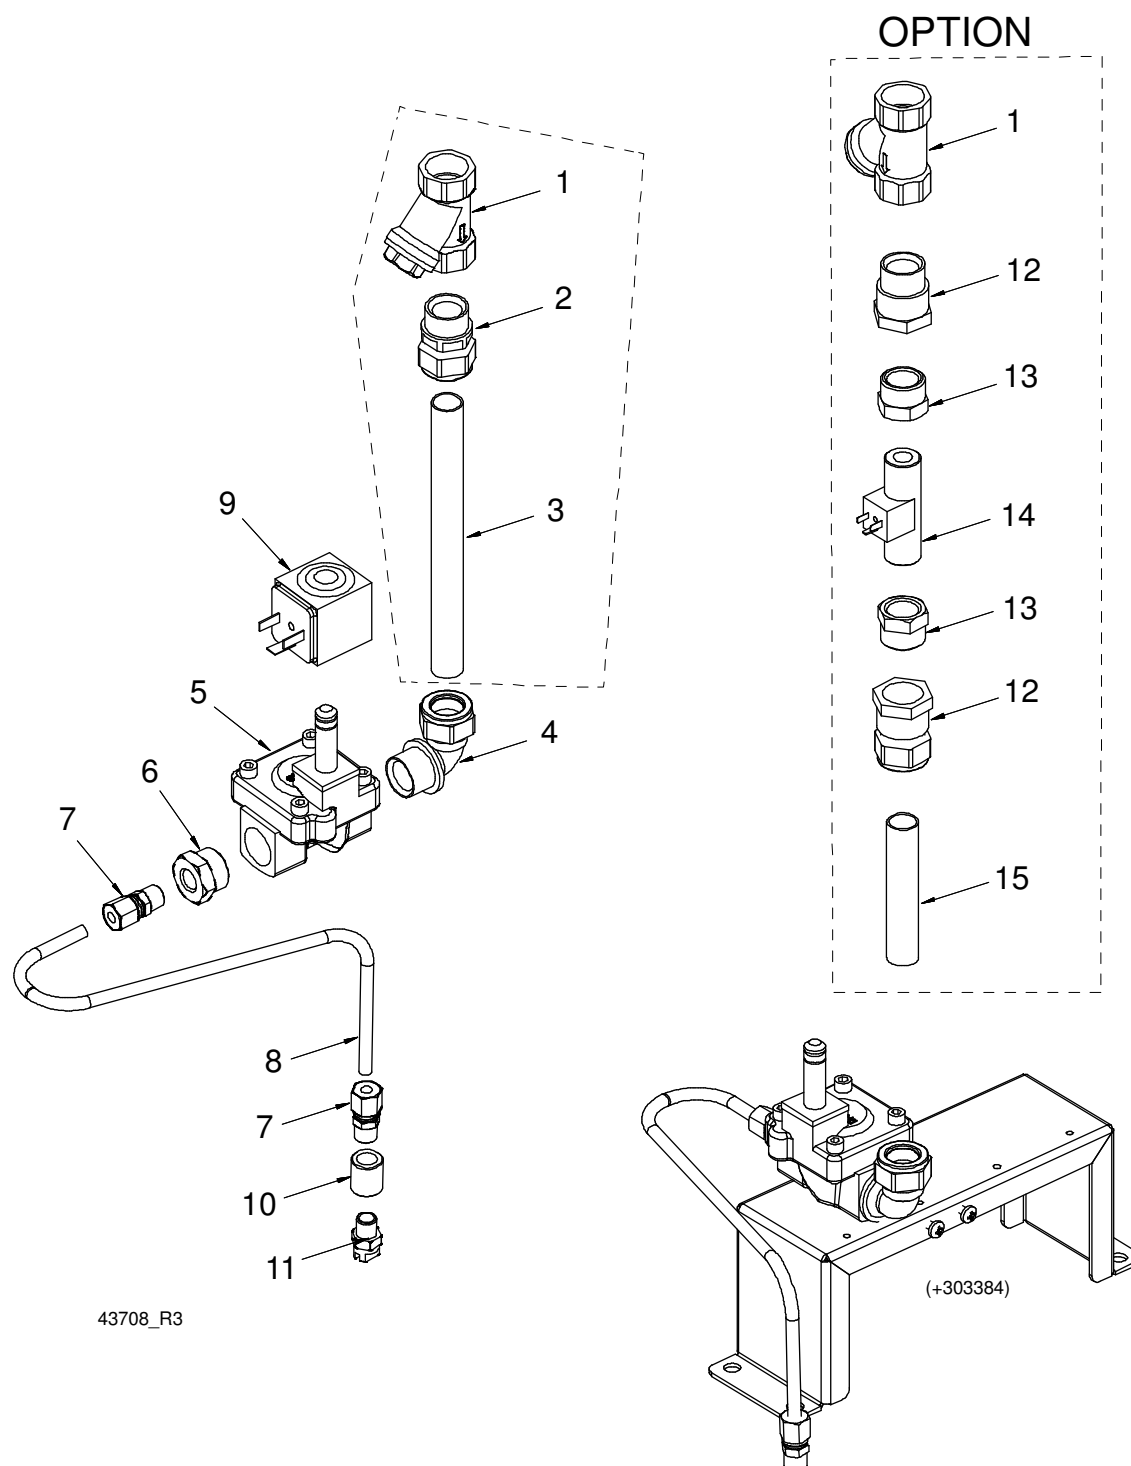

Spare parts

Cold water connection			
Item	WD no.	Description	Comment
1	WD709.1804	Filter	
2	WD705.0914	Straight Coupling	
	WD705.0420	* Cone	
	WD705.0315	* Nut	
3	WD44682.33	Pipe	
4	WD705.1609	Elbow coupling	
	WD705.0420	* Cone	
	WD705.0315	* Nut	
5		Solenoid valve, housing	See the machine's wiring diagram
6	WD706.0305	Bushing	
7	WD706.0901	Straight Coupling	
8	WD47907.31	Pipe	
9		Coil	See the machine's wiring diagram
10	WD720.2018	Sleeve	
11	WD712.2104	Nozzle	
12	WD705.1009	Straight Coupling	Option, (WEB Tool)
	WD705.0405	* Cone	
	WD705.0205	* Nut	
13	WD706.0308	Bushing	Option, (WEB Tool)
14		Flow meter	Option (WEB Tool) See the machine's wiring diagram
15	WD44682.32	Pipe	Option, (WEB Tool)

 1.7 Hot water connection

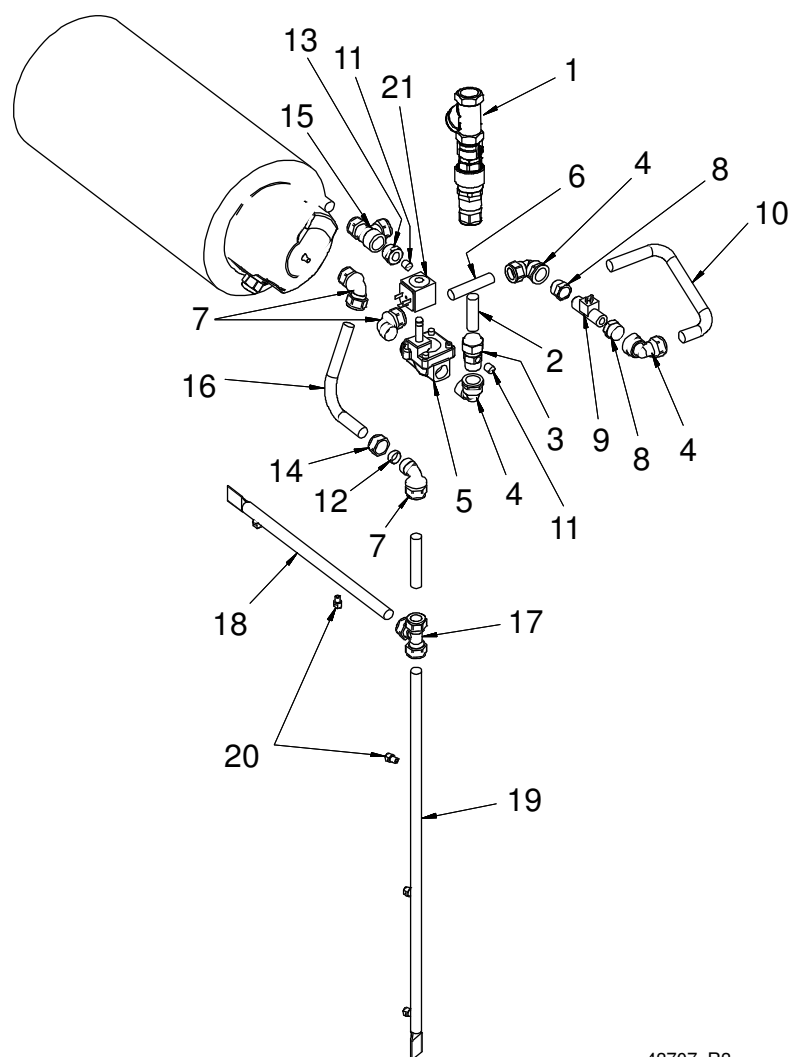


43707_R3

Spare parts

Hot water connection			
Item	WD no.	Description	Comment
1	WD305670.01	Coupling combination	
2	WD44682.32	Pipe	
3	WD04847.01	Straight Coupling	
4	WD705.1903	Elbow coupling	
	WD705.0420	* Cone	
	WD705.0316	* Nut	
5		Solenoid valve, housing	See the machine's wiring diagram
6	WD44682.31	Pipe	
7	WD705.1607	Elbow coupling	
	WD705.0420	* Cone	
	WD705.0316	* Nut	
8	WD706.0308	Bushing	
9		Flow meter	See the machine's wiring diagram
10	WD46321.31	Pipe	
11	WD04847.32	Plug	
12	WD705.0420	Cone	
13	WD706.0305	Bushing	
14	WD705.0316	Nut	
15	WD705.2703	T coupling	
	WD705.0420	* Cone	
	WD705.0316	* Nut	
16	WD36520.31	Pipe	
17	WD705.2215	T coupling	
	WD705.0420	* Cone	
	WD705.0316	* Nut	
18	WD307144.01	Rinse pipe	
20	WD712.1010	* Nozzle	
19	WD307143.01	Rinse pipe	
20	WD712.1010	* Nozzle	
21		Coil	See the machine's wiring diagram

 
1.8 Tank

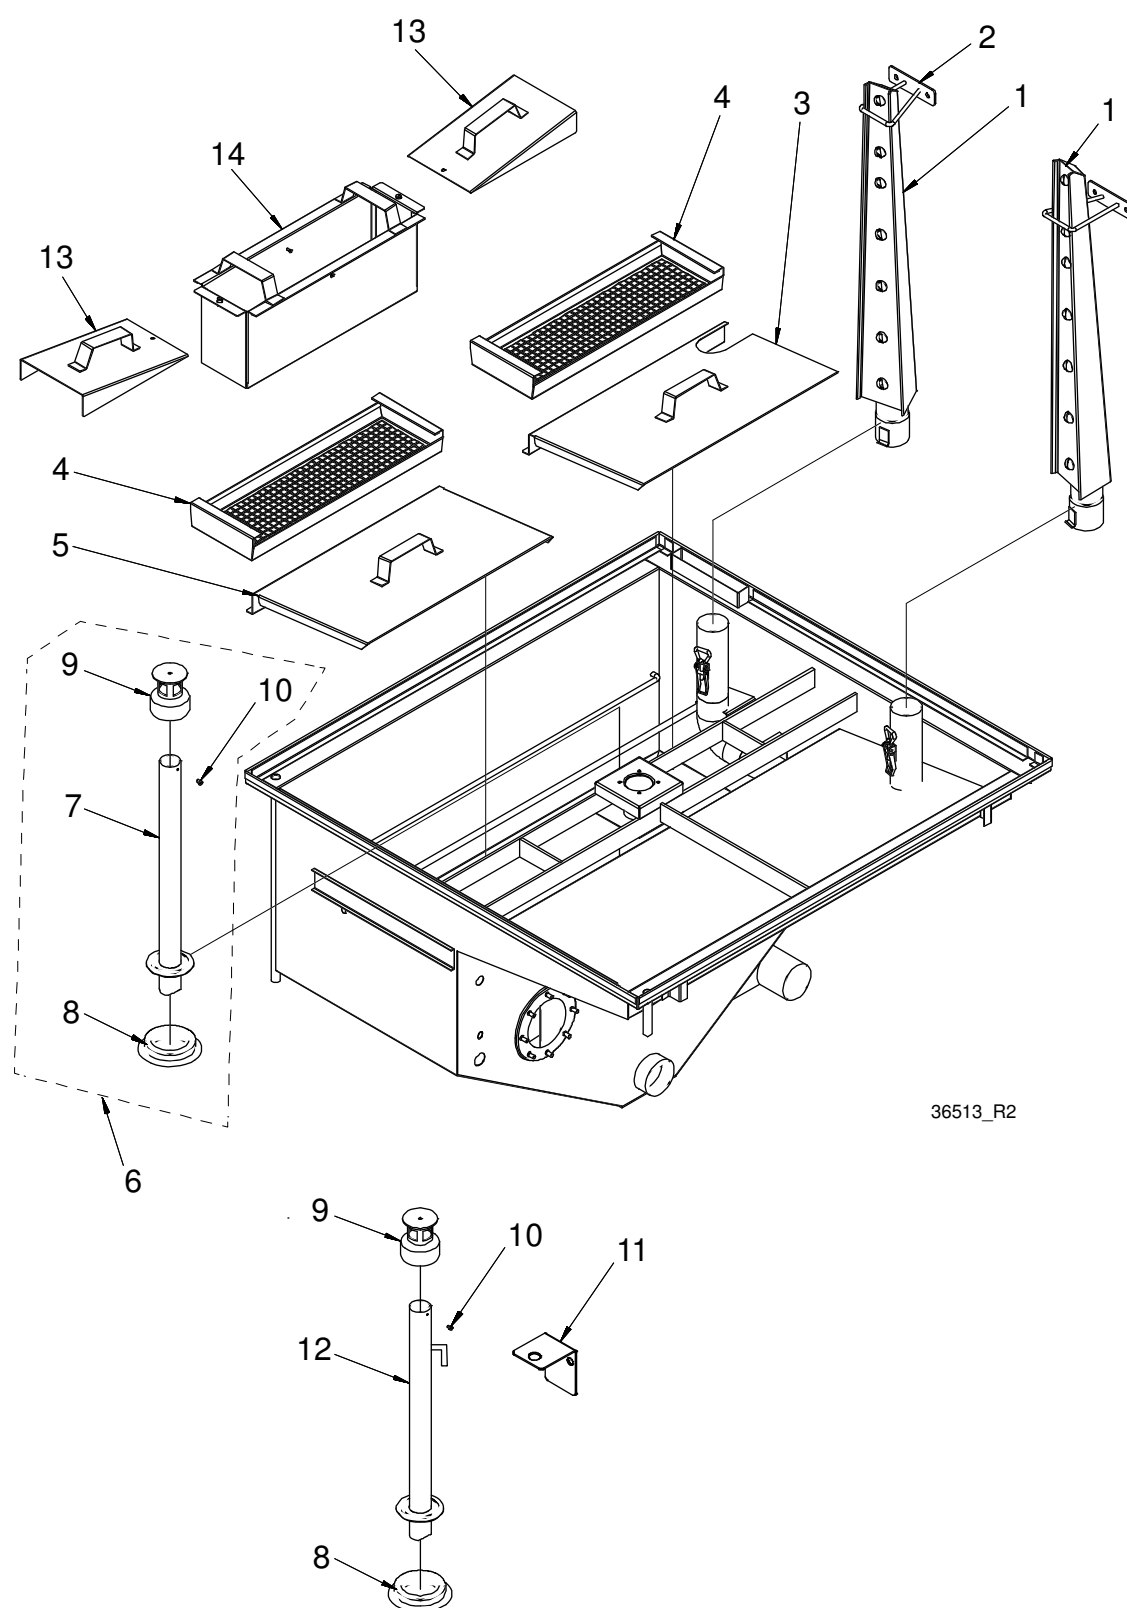

Spare parts

Tank			
Item	WD no.	Description	Comment
1	WD38326.01	Wash arm	
2	WD37868.01	Wash arm support	
3	WD26337.01	Cover plate	
4	WD23405.31	Filter	
5	WD26336.01	Cover plate	
6	WD36462.75	Level pipe, Cpl	
7	WD36463.01	* Level pipe - weld	
8	WD719.4036	* Level pipe sealing	
9	WD41225.31	* Foam separator	
10	WD700.0607	* Screw	
11	WD45765.31	Guide plate	Option, Marine
12	WD26728.01	Level pipe	Option, Marine
13	WD36379.01	Granule collection plate	
14	WD36377.01	Granule basket	


1.9 Tank electrical components

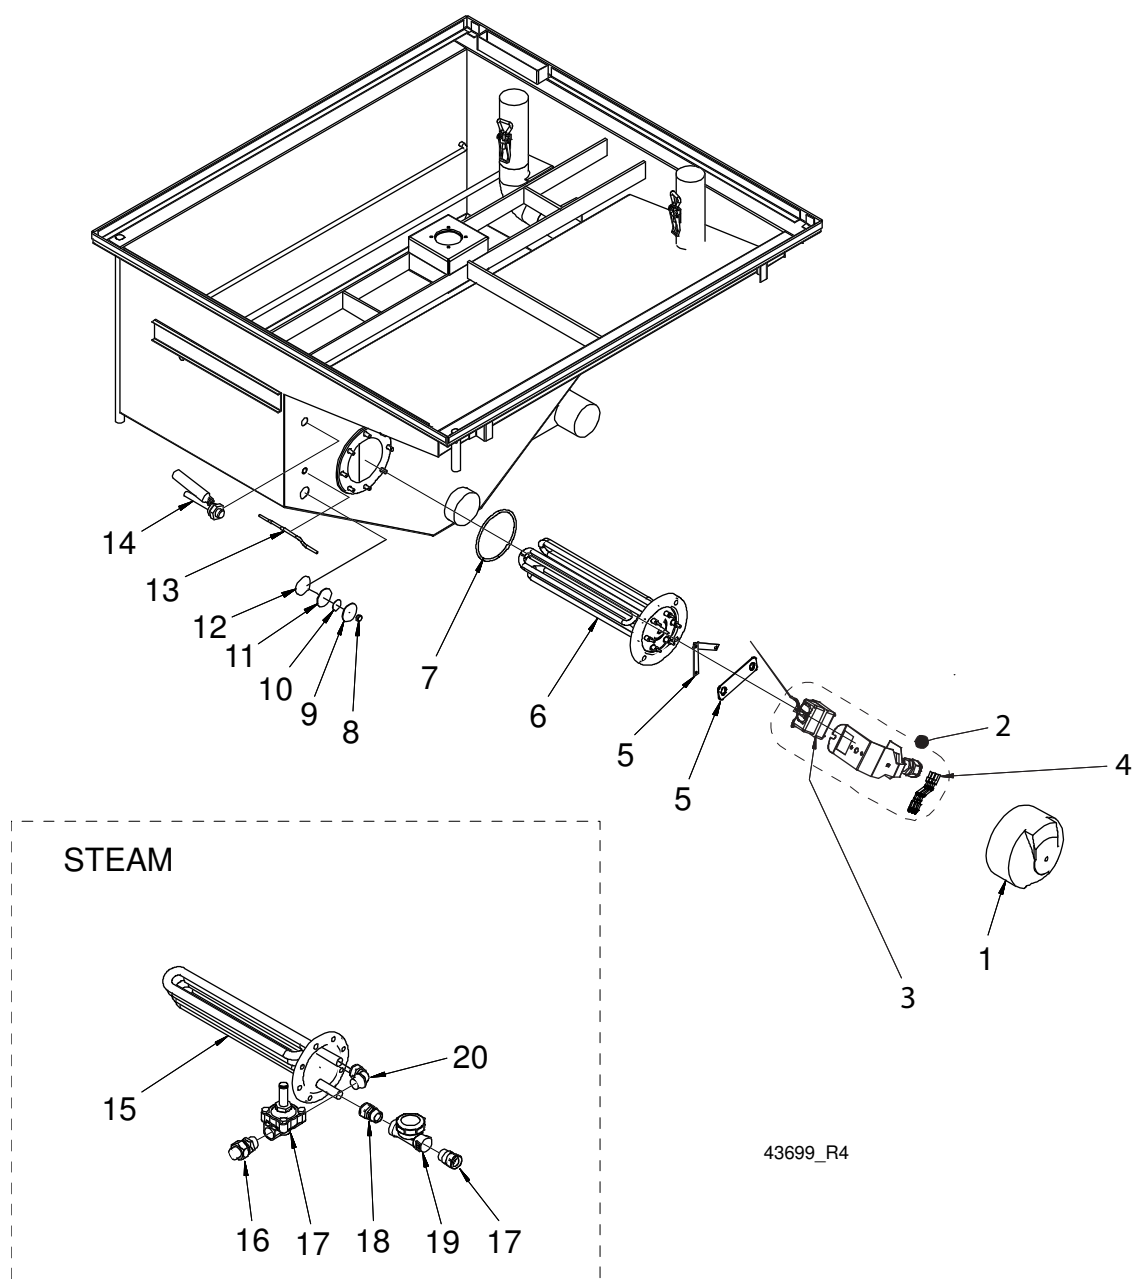

Spare parts

Tank electrical components			
Item	WD no.	Description	Comment
1	WD301321.31	Protective cover	
2	WD302113.01	Tank heating element overheating protection device (400V), Cpl	
2	WD302113.02	Tank heating element overheating protection device (230V), Cpl	
2	WD302113.03	Tank heating element overheating protection device (440V), Cpl	Marine
3		* Overheating protection device	See the machine's wiring diagram
4	WD670.8244	* Connection cable	
4	WD670.8245	* Connection cable	Marine
5	WD04920.31	Copper jumper	400-415V
5	WD400526.31	Connection lug	200-240V
6		Heating element	See the machine's wiring diagram
7	WD719.1090	O-ring	
8	WD700.0904	Nut	
9	WD700.1250	Washer	
10	WD45637.31	Guide washer	
11	WD682.31	Gasket	
12	WD45843.01	Sealing washer	
13		Temp. sensor	See the machine's wiring diagram
14		Level switch	See the machine's wiring diagram
15		Steam heating element	Optional See the machine's wiring diagram
16	WD704.0912	Soldering coupling	Option
17		Solenoid valve, housing	Optional See the machine's wiring diagram
18	WD705.0914	Straight Coupling	Option
	WD705.0420	* Cone	Option
	WD705.0316	* Nut	Option
19	WD709.1766	Steam trap	Option
20	WD705.1609	Elbow coupling	Option
	WD705.0420	* Cone	Option
	WD705.0315	* Nut	Option

1.10 Booster heater 400V 9kW

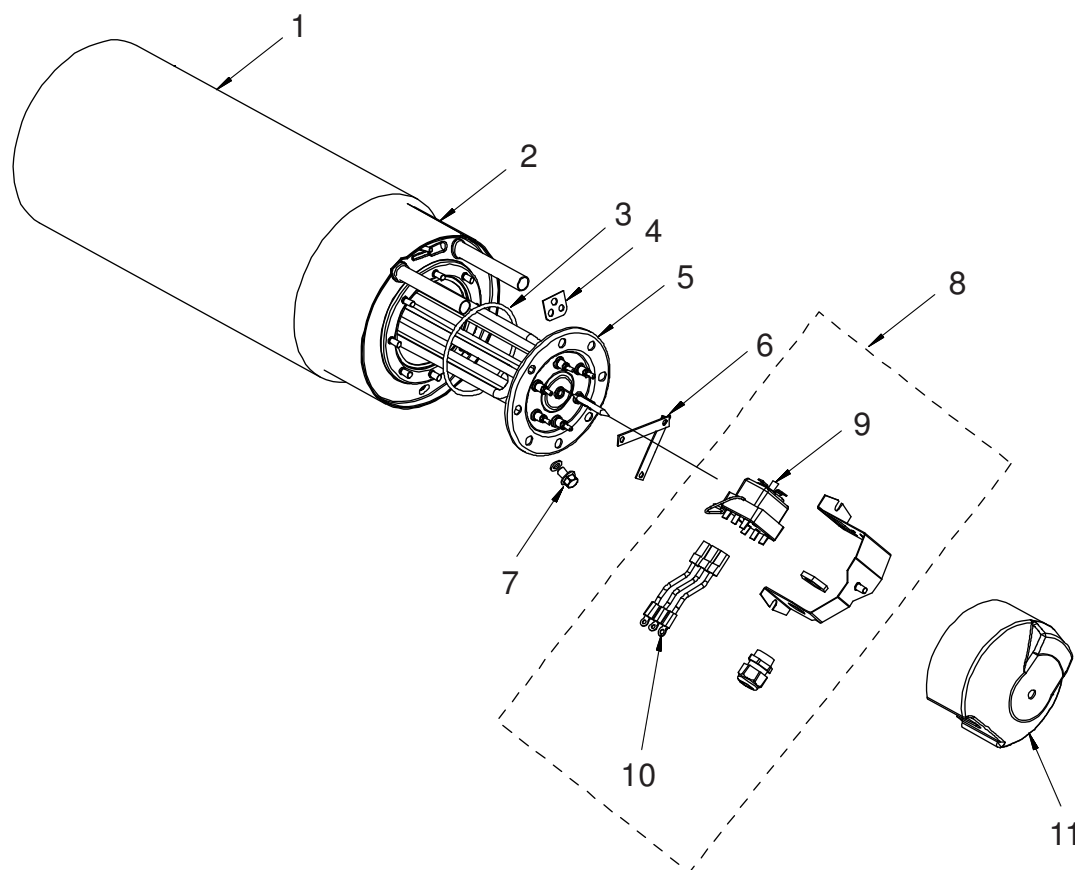


Gstr_4_1

Spare parts

Booster heater 400V 9kW			
Item	WD no.	Description	Comment
	WD01163.36	Booster heater 400V 9kW	
1	WD809.0903	* Heat insulation booster heater	
2	WD01162.04	* Booster heater container (E)	
3	WD719.1090	* O-ring	
4	WD44203.31	* Bracket, temp. sensor	
5		* Heating element	See the machine's wiring diagram
6	WD04920.31	* Copper jumper	
7	WD700.2501	* Collared screw and gasket	
8	WD302113.01	* Tank heating element overheating protection device (400-415 V), Cpl	
9		** Overheating protection device	See the machine's wiring diagram
10	WD670.8244	** Connection cable	
11	WD301321.31	Protective cover	

 
1.11 Booster heater 230V 9kW (optional)

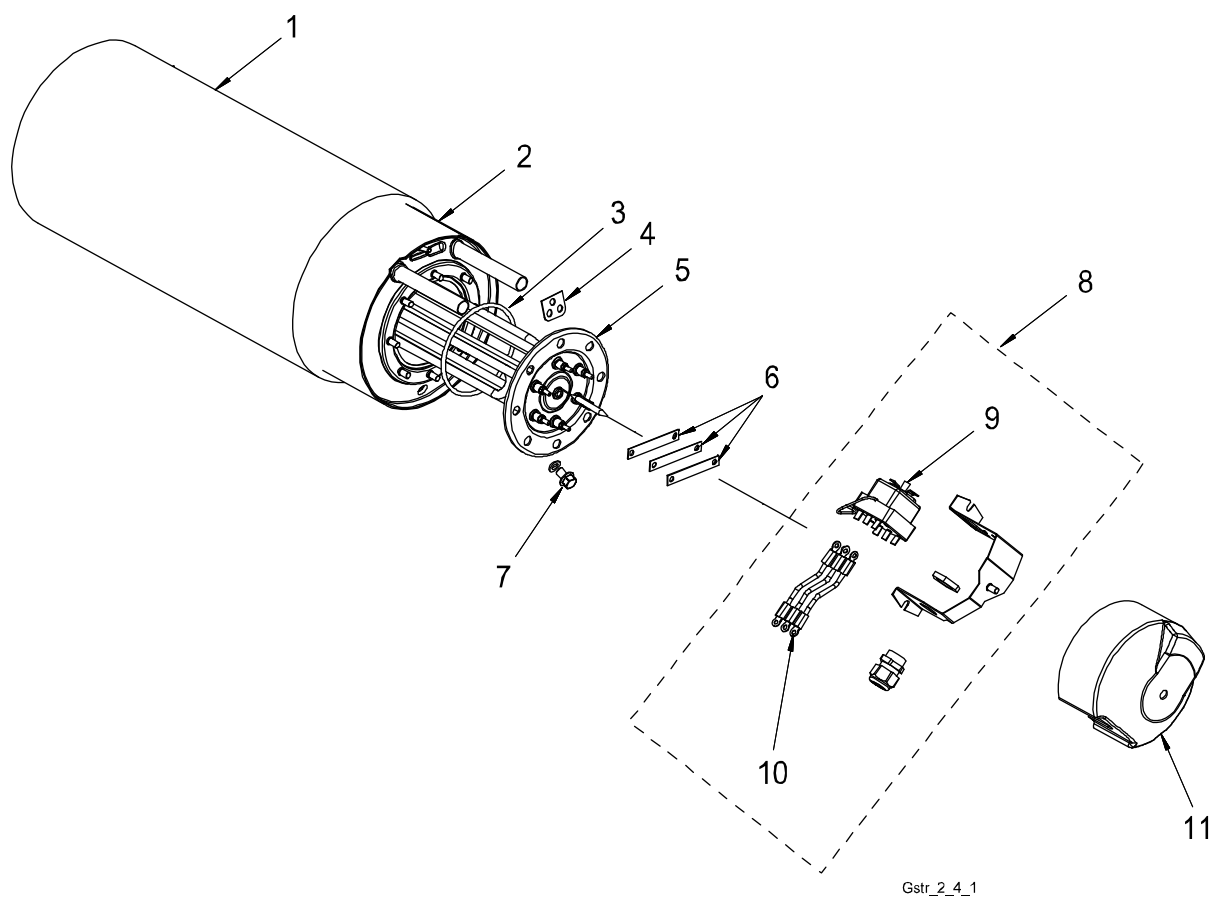

Spare parts

Booster heater 230V 9kW (optional)			
Item	WD no.	Description	Comment
	WD01163.35	Booster heater 230V 9kW	
1	WD809.0903	* Heat insulation booster heater	
2	WD01162.04	* Booster heater container (E)	
3	WD719.1090	* O-ring	
4	WD44203.31	* Bracket, temp. sensor	
5		* Heating element	See the machine's wiring diagram
6	WD400526.31	* Connection lug	
7	WD700.2501	* Collared screw and gasket	
8	WD302113.02	* Tank heating element overheating protection device (230V), Cpl	
9		** Overheating protection device	See the machine's wiring diagram
10	WD670.8245	** Connection cable	
11	WD301321.31	Protective cover	


1.12 Booster heater 200V 9kW (optional)

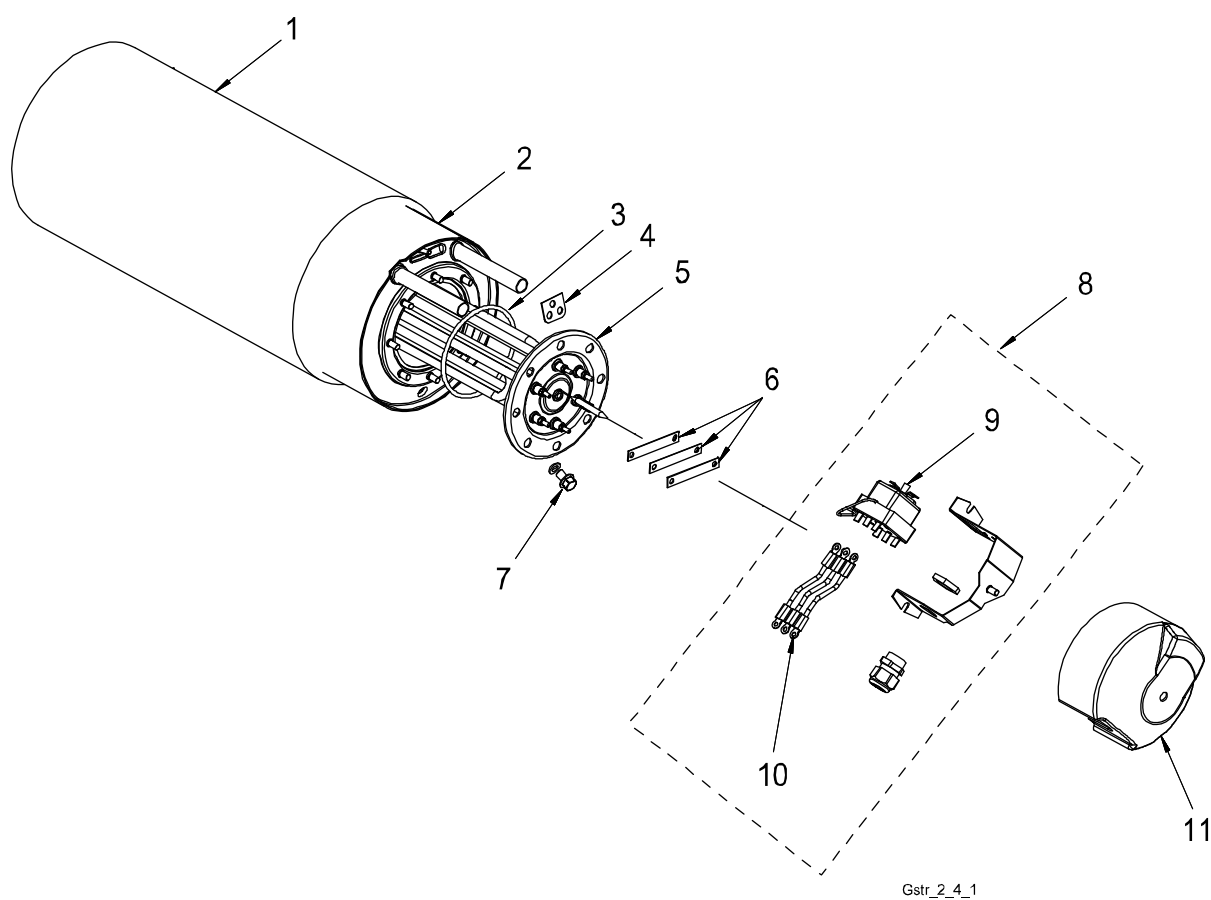

Spare parts

Booster heater 200V 9kW (optional)			
Item	WD no.	Description	Comment
	WD01163.37	Booster heater 200V 9kW	
1	WD809.0903	* Heat insulation booster heater	
2	WD01162.04	* Booster heater container (E)	
3	WD719.1090	* O-ring	
4	WD44203.31	* Bracket, temp. sensor	
5		* Heating element	See the machine's wiring diagram
6	WD400526.31	* Connection lug	
7	WD700.2501	* Collared screw and gasket	
8	WD302113.02	* Tank heating element overheating protection device (230V), Cpl	
9		** Overheating protection device	See the machine's wiring diagram
10	WD670.8245	** Connection cable	
11	WD301321.31	Protective cover	

1.13 Booster heater 440V 9kW (optional) (marine)

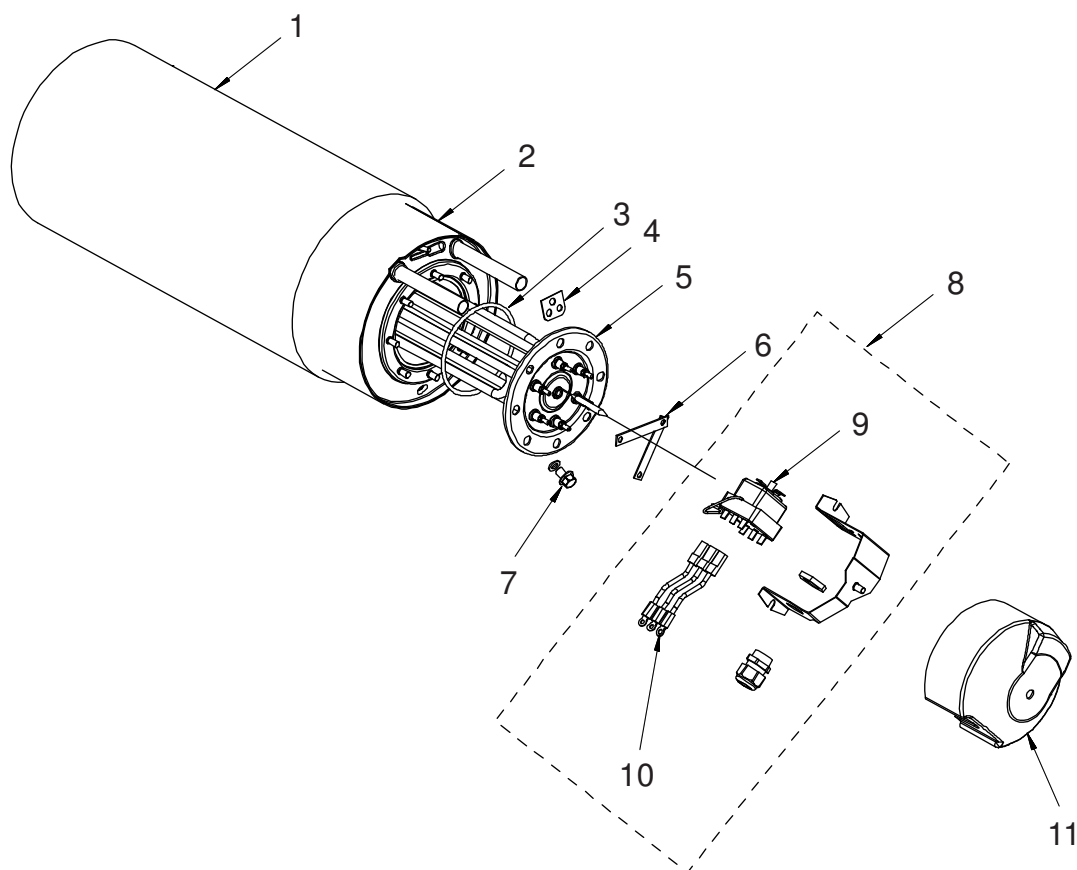


Gstr_4_1

Spare parts

Booster heater 440V 9kW (optional) (marine)			
Item	WD no.	Description	Comment
	WD01163.39	Booster heater 440V 9kW	
1	WD809.0903	* Heat insulation booster heater	
2	WD01162.04	* Booster heater container (E)	
3	WD719.1090	* O-ring	
4	WD44203.31	* Bracket, temp. sensor	
5		* Heating element	See the machine's wiring diagram
6	WD400526.31	* Connection lug	
7	WD700.2501	* Collared screw and gasket	
8	WD302113.03	* Tank heating element overheating protection device (440V), Cpl	
9		** Overheating protection device	See the machine's wiring diagram
10	WD670.8245	** Connection cable	
11	WD301321.31	Protective cover	

 
1.14 Booster heater, steam (optional)

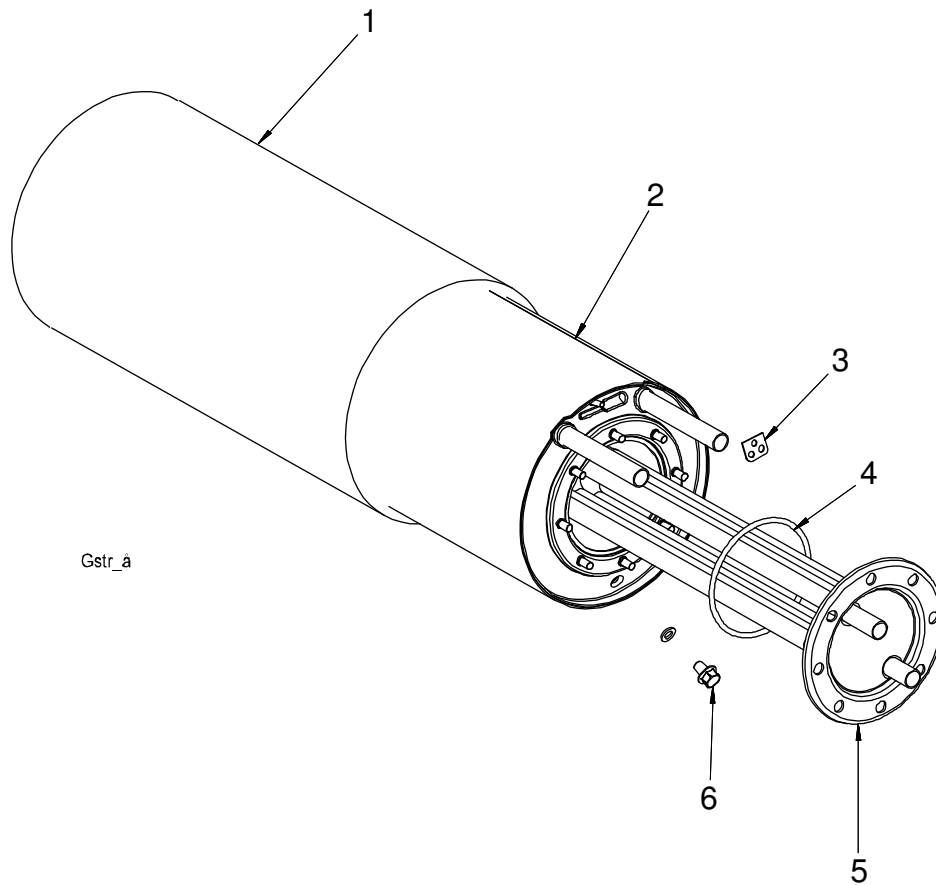

Spare parts

Booster heater, steam (optional)			
Item	WD no.	Description	Comment
	WD01163.17	Booster heater (steam)	
1	WD809.0903	* Heat insulation booster heater	
2	WD01162.04	* Booster heater container (E)	
3	WD719.1090	* O-ring	
4	WD44203.31	* Bracket, temp. sensor	
5		* Steam heating element	See the machine's wiring diagram
6	WD700.2501	* Collared screw and gasket	

1.15 Drive

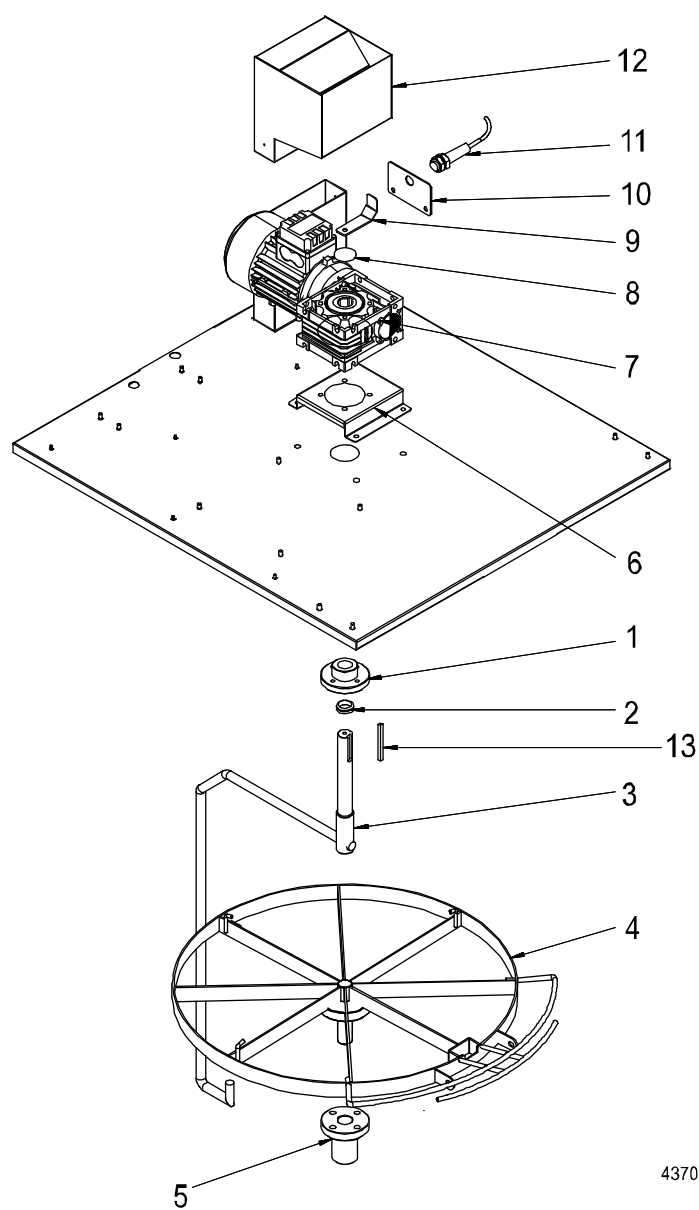


43702_R5

Spare parts

Drive			
Item	WD no.	Description	Comment
1	WD44658.31	Bearing, drive arm	
2	WD719.0115	V ring	
3	WD301815.01	Drive arm	
4	WD36134.01	Rotating table	
5	WD43400.31	Bearing, rotating table	
6	WD302196.31	Bracket for worm gear	
7		Worm gear	See the machine's wiring diagram
8	WD46223.31	Washer	
9	WD43576.01	Indication arm	
10	WD46223.31	Bracket for inductive sensor	
11		Inductive sensor	See the machine's wiring diagram
12	WD23575.01	Ventilation hood	
13	WD805.0920	Wedge	


 
1.16 Washing pumps with connections

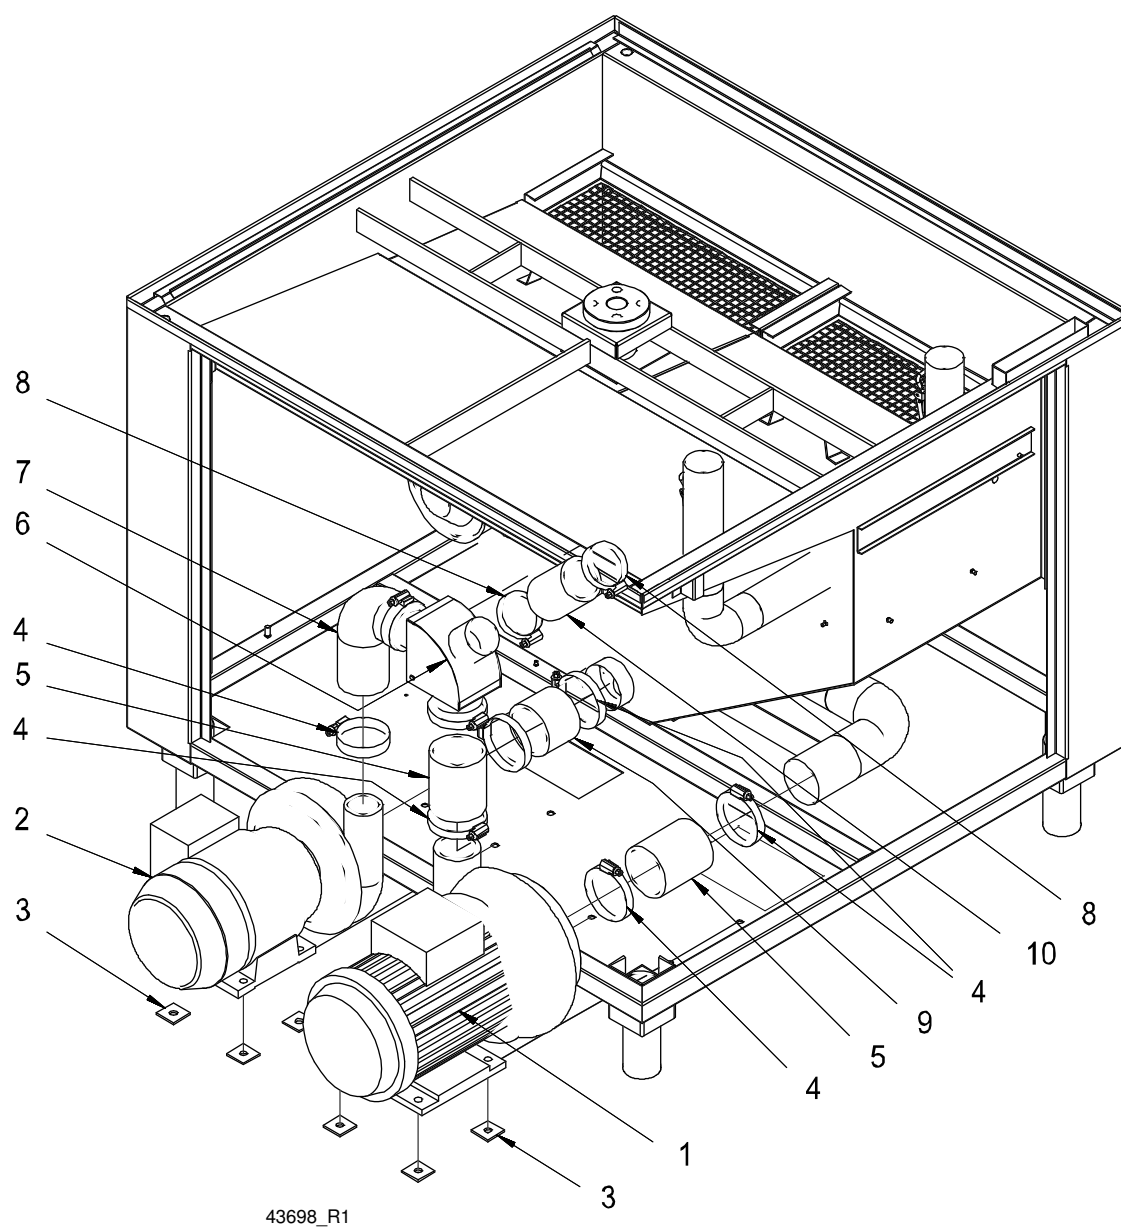

Spare parts

Washing pumps with connections			
Item	WD no.	Description	Comment
1		Pump P65-18	See the machine's wiring diagram
2		Pump 1226	See the machine's wiring diagram
3	WD719.1330	Rubber foot	
4	WD714.0212	Hose clamp	
5	WD717.0163	Radiator hose	L=85mm
6	WD23581.01	Reversing valve	
7	WD04047.31	Rubber bend	
8	WD714.0110	Hose clamp	
9	WD717.0163	Radiator hose	L=55mm
10	WD717.0150	Radiator hose	L=85mm

1.17 Drain/waste pipe connection

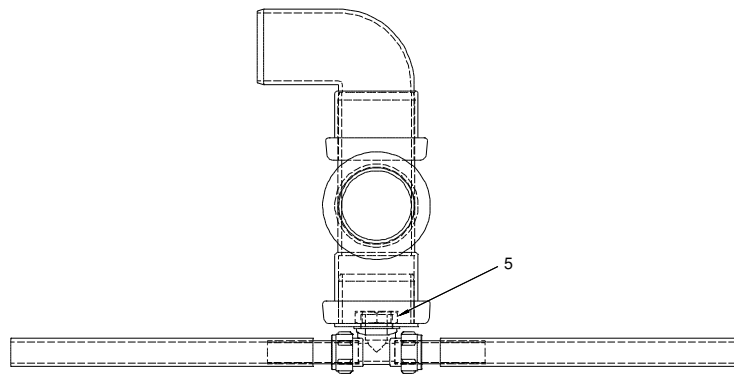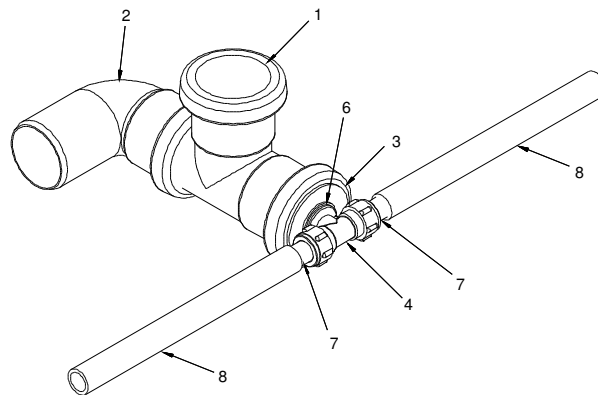


306306

Spare parts

Drain/waste pipe connection			
Item	WD no.	Description	Comment
1	WD726.0101	Manifold	
2	WD726.0102	PVC bend	
3	WD726.0508	Plug	
4	WD705.2303	Straight Coupling	
	WD705.0405	* Cone	
	WD705.0205	* Nut	
5	WD705.0205	Nut	
6	WD706.0102	Gasket	
7	WD44682.31	Pipe	
8	WD719.0314	Hose	L=0.7m

 
1.18 Drain pump (optional)

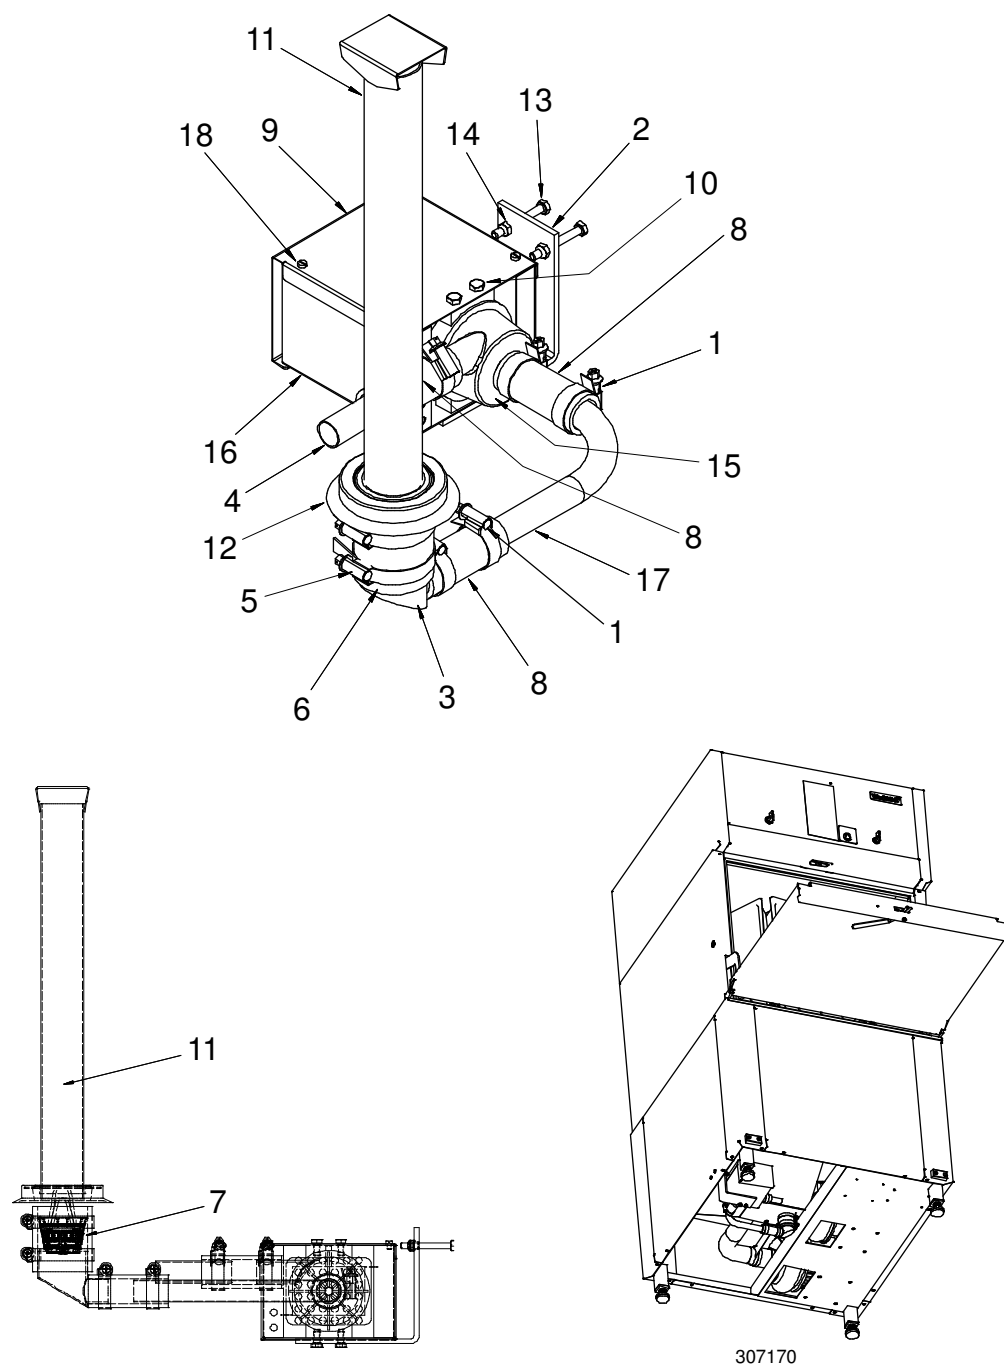

Spare parts

Drain pump (optional)			
Item	WD no.	Description	Comment
1	WD714.0106	Hose clamp	
2	WD46004.31	Bracket	
3	WD04224.01	Drain/waste pipe connection	
4	WD04703.31	Pipe connection	
5	WD714.0110	Hose clamp	
6	WD717.0150	Hose	L=65mm
7	WD44960.01	Filter basket	
8	WD717.0125	Hose	L=80 mm
9	WD301609.31	Lid for cover cap	
10	WD700.0112	Screw	
11	WD306268.01	Level pipe, Cpl	
12	WD719.4036	* Level pipe sealing	
13	WD700.0122	Screw	
14	WD700.1404	Lock nut	
15		Drain pump, Hanning	See the machine's wiring diagram
16	WD301607.31	Cover cap	
17	WD307171.31	Pipe for drain pump	
18	WD700.0607	Screw	


1.19 Booster pump (option)

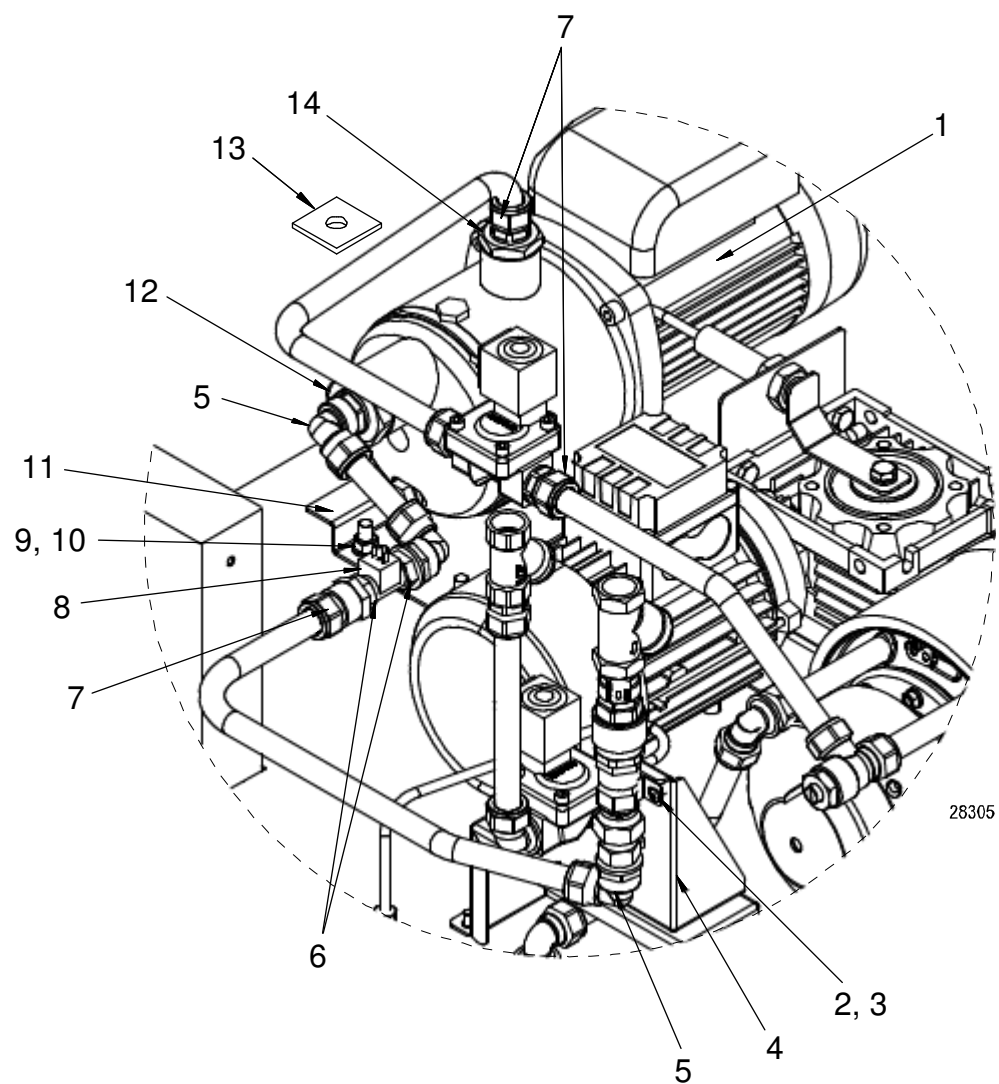

Spare parts

Booster pump (option)			
Item	WD no.	Description	Comment
1		Booster pump 1HM	See the machine's wiring diagram
2	WD700.0610	Screw	
3	WD51504806	Clip	
4	WD46524.31	Bracket, water connection	
5	WD705.1904	Elbow coupling	
	WD705.0405	* Cone	
	WD705.0205	* Nut	
6	WD706.0308	Bushing	
7	WD705.1009	Straight Coupling	
	WD705.0405	* Cone	
	WD705.0205	* Nut	
8		Flow meter	See the machine's wiring diagram
9	WD700.0905	Nut	
10	WD700.1206	Washer	
11	WD304364.31	Bracket for booster pump	
12	WD706.0816	Nipple	
13	WD719.1330	Rubber foot	
14	WD706.0302	Bushing	


1.20 Break tank, smst (optional)

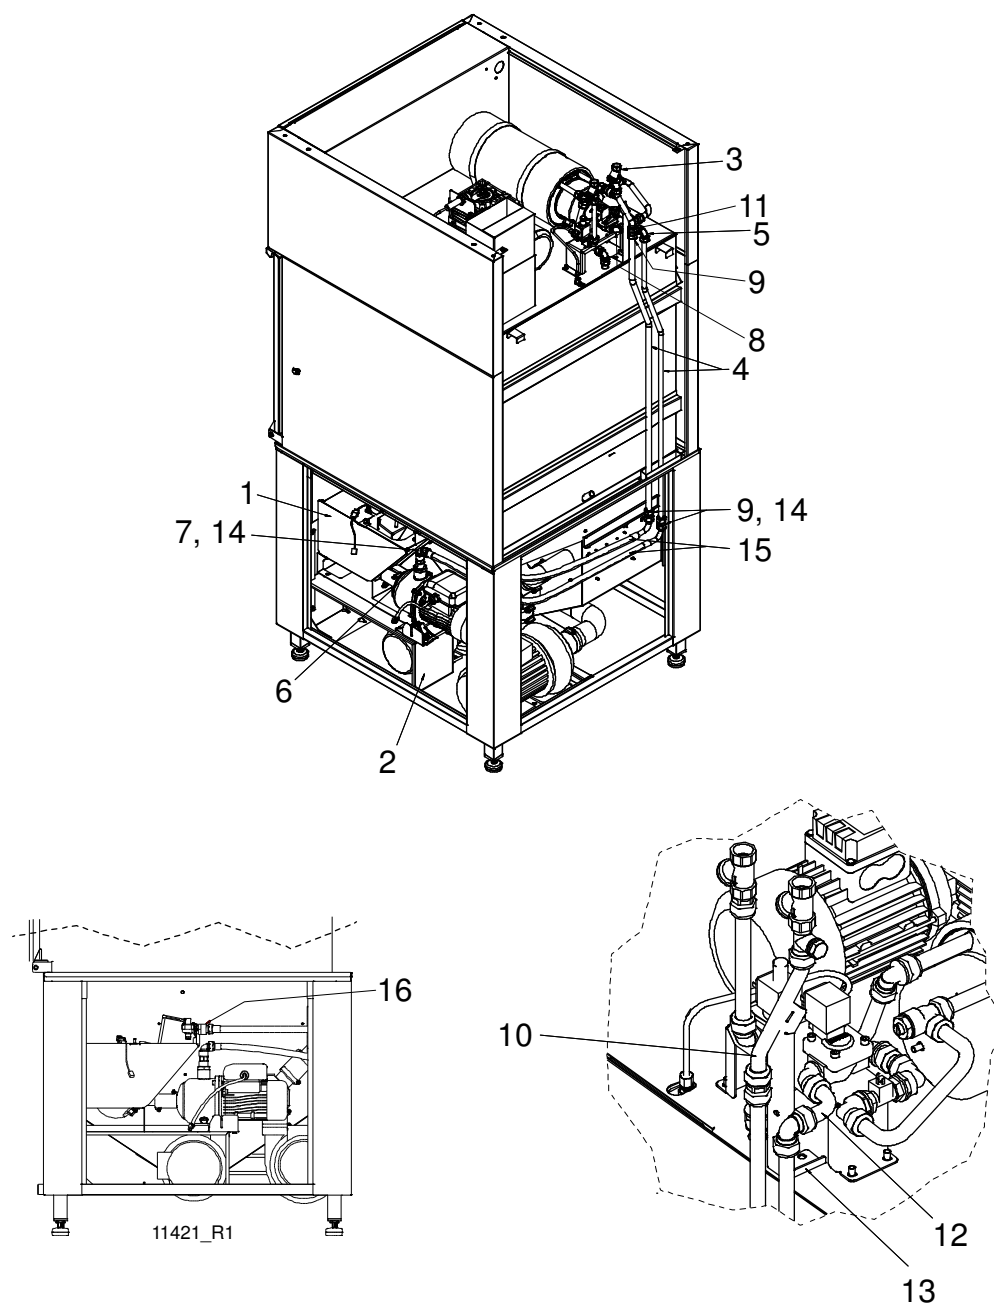

Spare parts

Break tank, smst (optional)			
Item	WD no.	Description	Comment
1		Break tank, cpl	See individual section
2	WD304164.31	Bracket for break tank, package	
3	WD305671.01	Hot water connection	
4	WD304189.31	Pipe, incoming	
5	WD705.1205	Elbow coupling	
6	WD709.1305	Non-return valve	
7	WD705.1610	Elbow coupling	
	WD705.0420	* Cone	
	WD705.0315	* Nut	
8	WD705.1609	Elbow coupling	
	WD705.0420	* Cone	
	WD705.0315	* Nut	
9	WD705.0914	Straight Coupling	
	WD705.0420	* Cone	
	WD705.0315	* Nut	
10	WD47281.31	Connection pipe	
11	WD705.0415	Nut	
12	WD7281.32	Connection pipe	
13	WD304223.31	Bracket for connection pipe	
14	WD709.0820	Reduction	
15	WD719.5025	Hose	L=800mm
16	WD705.1010	Straight Coupling	
	WD705.0405	* Cone	
	WD705.0205	* Nut	


1.21 Break tank (optional)

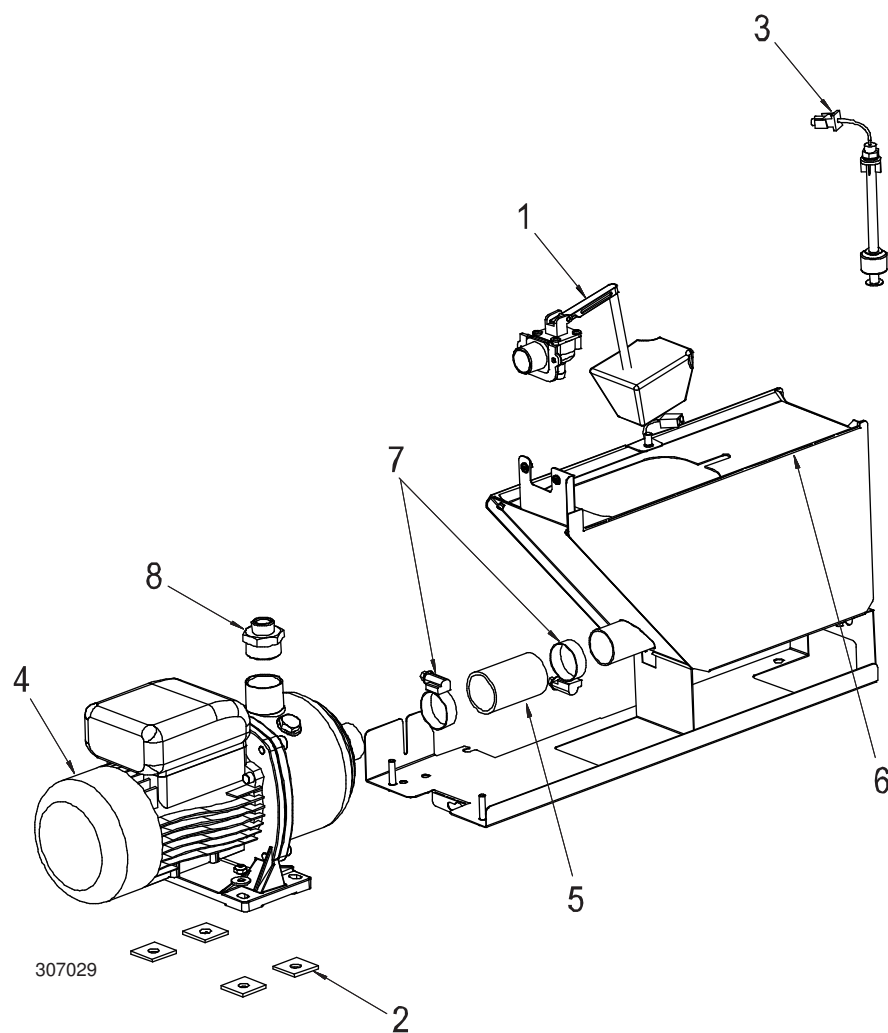

Spare parts

Break tank (optional)			
Item	WD no.	Description	Comment
1	WD709.4021	Float valve	
2	WD719.1330	Rubber foot	
3		Level monitor	See the machine's wiring diagram
4		Booster pump 1HM	See the machine's wiring diagram
5	WD48107.31	Hose connection	
6	WD306584.01	Tank, Cpl	
7	WD714.0108	Hose clamp	
8	WD706.0813	Nipple	


1.22 Pump P65-18

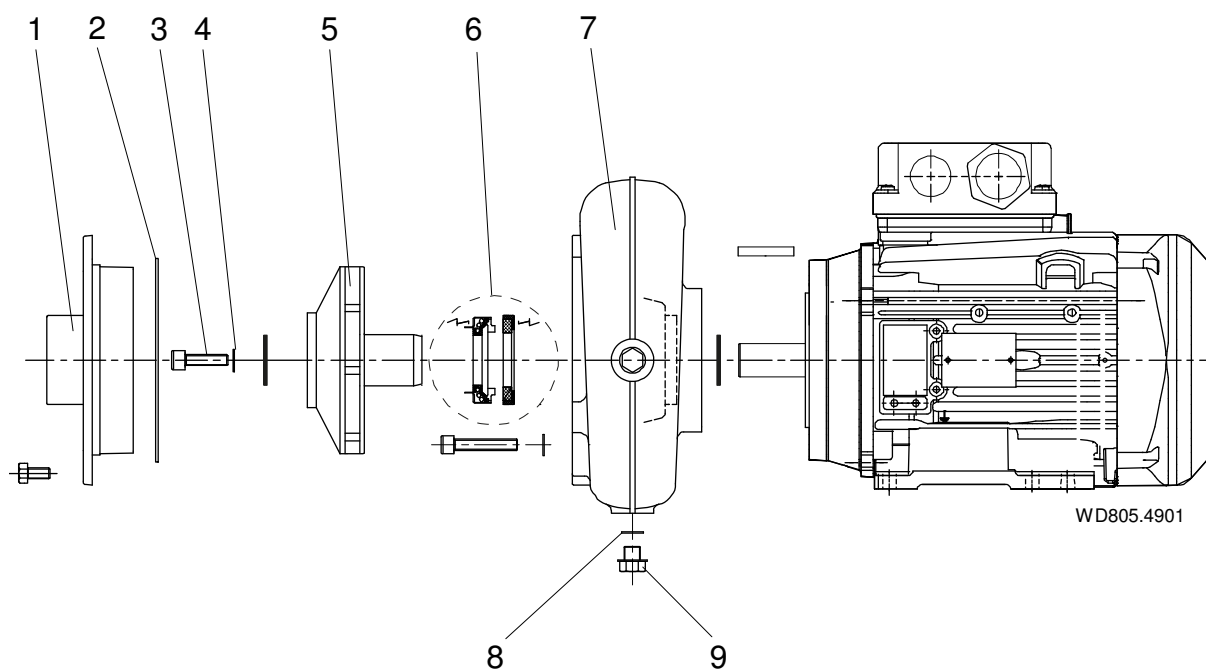

Spare parts

Pump P65-18			
Item	WD no.	Description	Comment
	WD805.4901	Pump P65-18 230/400V 50Hz	
	WD805.4901E	Pump P65-18 200V 50Hz	
	WD805.4901F	Pump P65-18 200V 60Hz	
	WD805.4901G	Pump P65-18 208/440V 60Hz	Canada
1	WD805.4904	* Pump housing cover	
2	WD805.0906	* O-ring	134.5x3 mm Not in WD805.4901G
3	WD805.0941	* Screw	Not in WD805.4901G
4	WD805.0940	* O-ring	7.66x1.78 mm Not in WD805.4901G
5	WD805.3902	* Pump wheel, closed	50 Hz
6	WD805.0907	* Mechanical seal	Not in WD805.4901E or WD805.4901G
7	WD805.5907	* Pump housing	
8	WD805.0925	* O-ring	10.78x2.62 mm
9	WD805.0926	* Plug	Not in WD805.4901G

1.23 Pump 1226

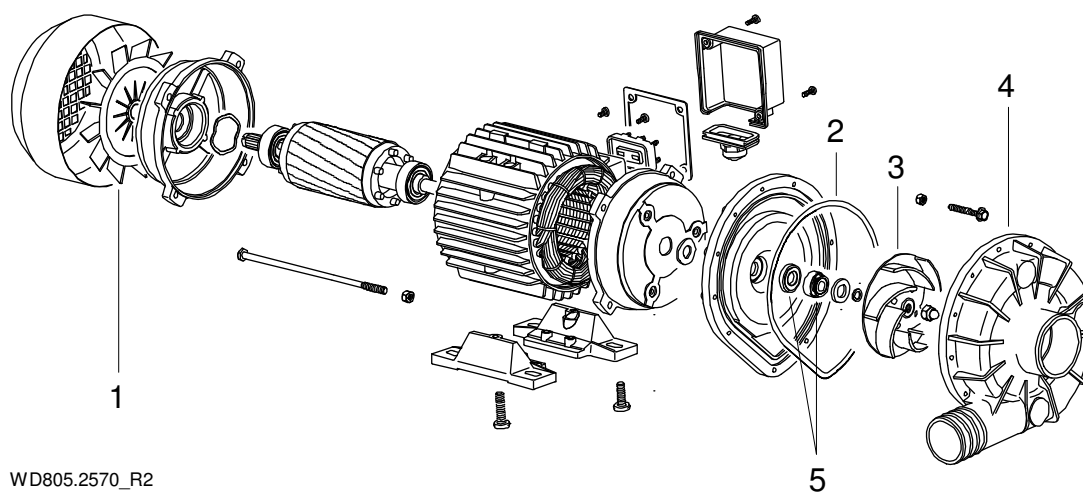

Spare parts

Pump 1226			
Item	WD no.	Description	Comment
	WD805.2570	Pump 1226 230V/400V 50Hz	
	WD805.2570A	Pump 1226 255V/440V 60Hz	
	WD805.2570B	Pump 1226 230V/400V 60Hz	
	WD805.2570C	Pump 1226 575 V 60 Hz	
	WD805.2570D	Pump 1226 277V/480V 60Hz	
	WD805.2570E	Pump 1226 200V/346V 50Hz	
	WD805.2570F	Pump 1226 200V/346V 60Hz	
1	WD805.2572	* Impeller	Not for WD805.2570D
2	WD805.2555	* O-ring	
3	WD805.2573	* Impeller	50 Hz
3	WD805.2643F	* Impeller	60 Hz
4	WD805.2571	* Pump housing	
5	WD805.2574	* Sealing	50Hz
5	WD805.2554	* Sealing	60Hz


1.24 Accessories WD90GR FLEX/HC



Spare parts

Accessories WD90GR FLEX/HC			
Item	WD no.	Description	Comment
1	WD209.7260	Granulate	10 kg (5 kg included with machine)
2	WD2097261	Separating spatula	One included with machine

1.25 Accessories WD90GR FLEX

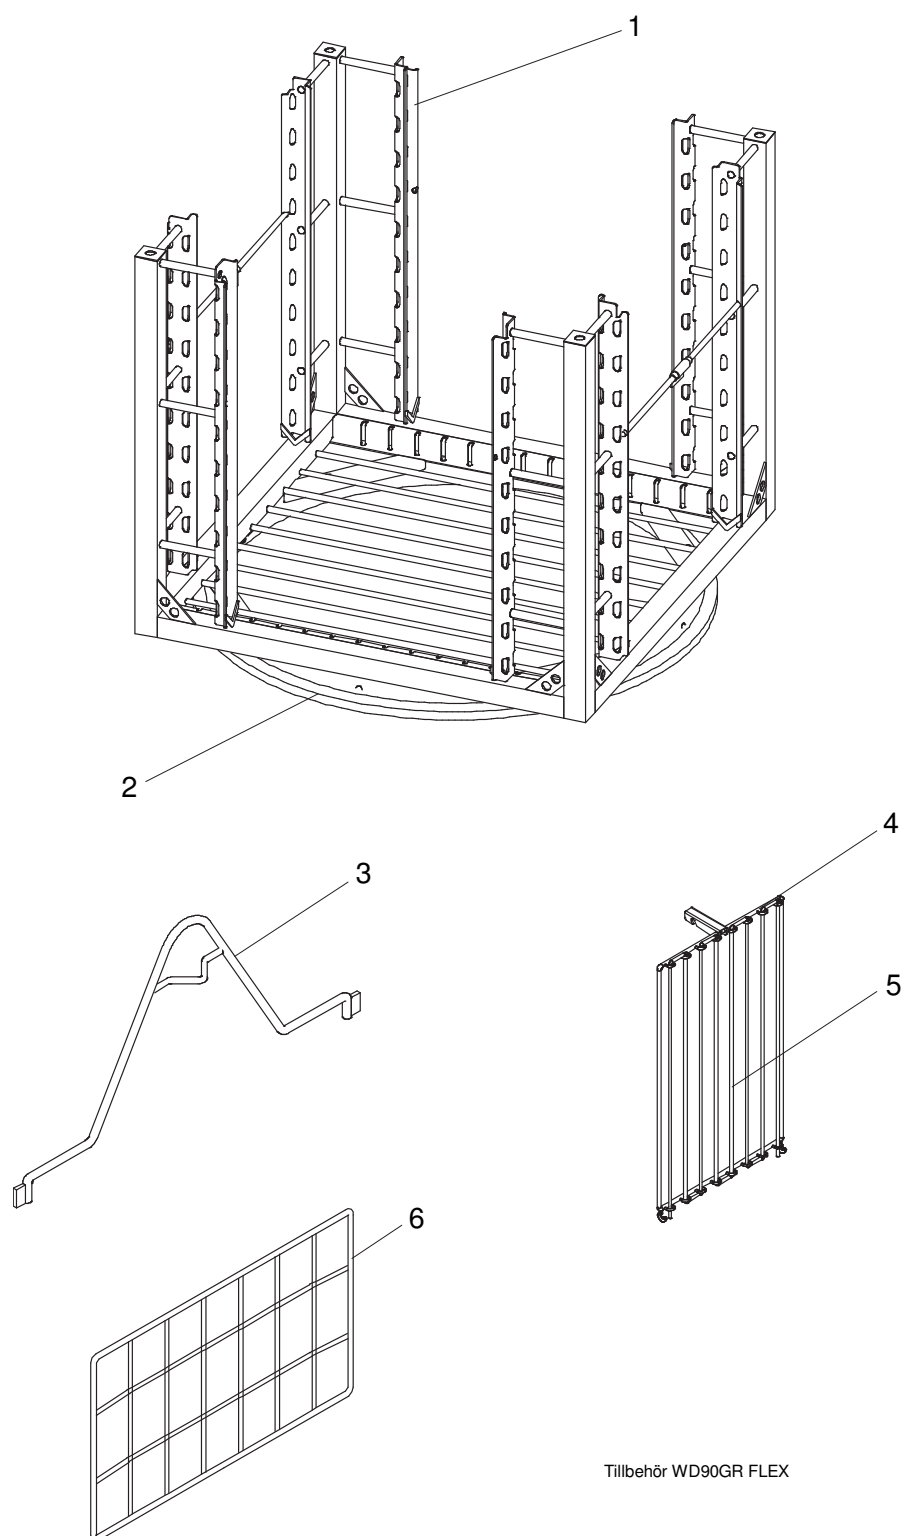


Tillbehör WD90GR FLEX

Spare parts

Accessories WD90GR FLEX			
Item	WD no.	Description	Comment
1	WD209.7276	Square cassette, cpl	One included with machine
2	WD39596.31	* Sliding ring	
3	WD209.7280	Supporting side	Three included with machine
4	WD209.7281	Flexible insert, cpl	One included with machine
5	WD809.0906	* Rubber band	4 m
6	WD209.7354	Pot grille	Three included with machine

1.26 Accessories WD90GR HC

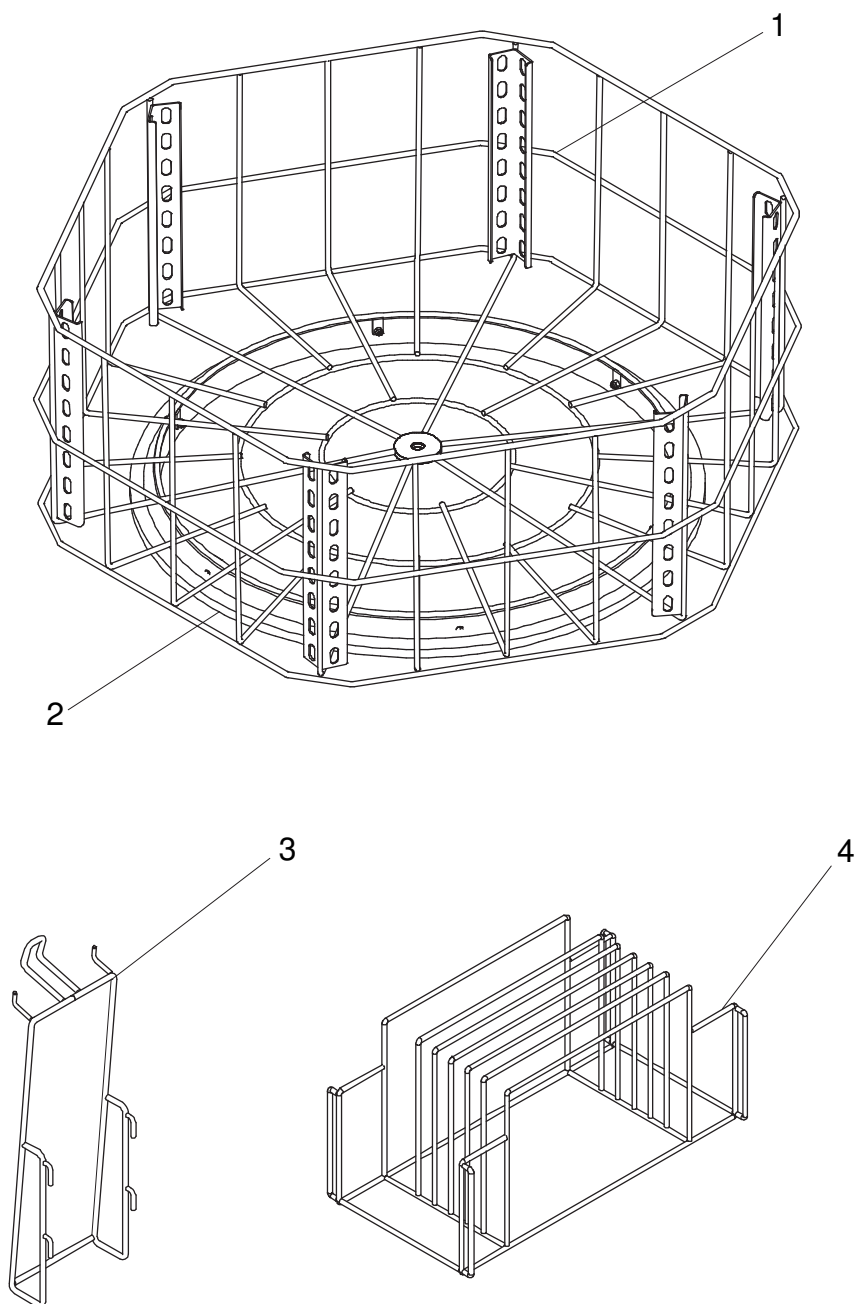


Tillbehör WD90GR HC

Spare parts

Accessories WD90GR HC			
Item	WD no.	Description	Comment
1	WD209.7285	Hexagonal cassette, cpl	One included with machine
2	WD39596.31	* Sliding ring	
3	WD209.7255	Pot holder	One included with machine
4	WD209.7284	Holder for 2/1 canteens.	One included with machine

 1.27 Extra equipment WD-90GR FLEX (optional)

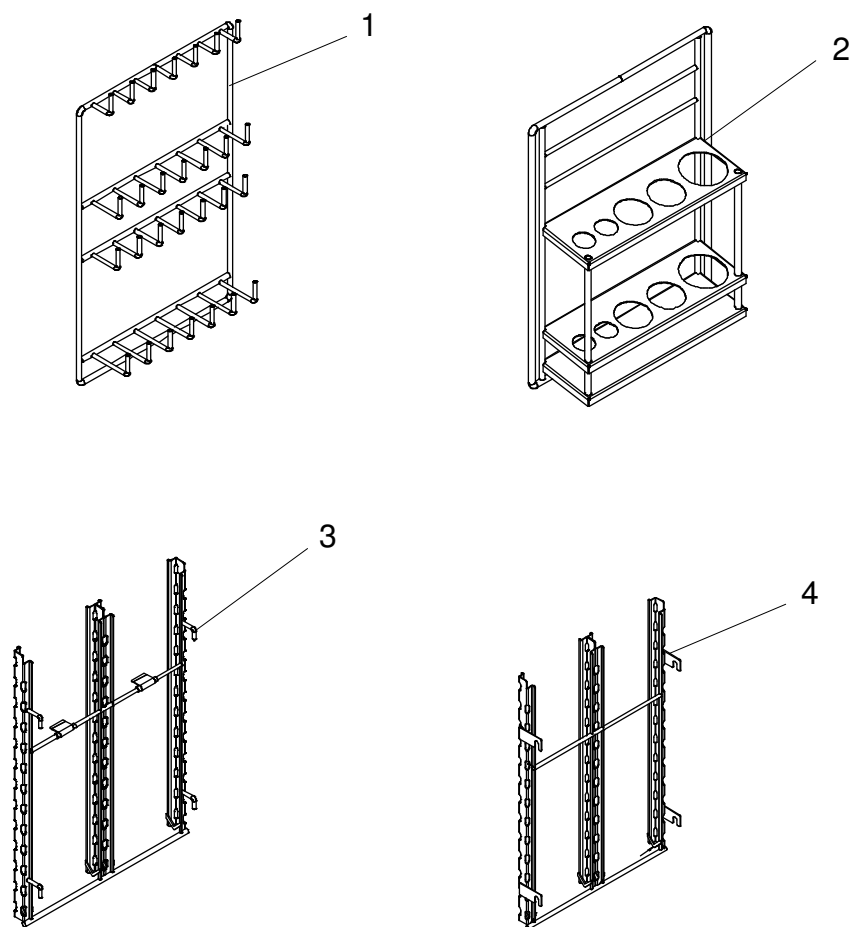


Extra utrustning WD-90GR FLEX (Options)

Spare parts

Extra equipment WD-90GR FLEX (optional)			
Item	WD no.	Description	Comment
1	WD209.7273	All-round holder	
2	WD209.7277	Utensil holder	
3	WD209.7282	Holder for 1/3, 1/6 and 1/9 containers	
4	WD209.7286	Holder for 1/4 and 1/6 canteens	

 1.28 Extra equipment WD-90GR FLEX (optional)

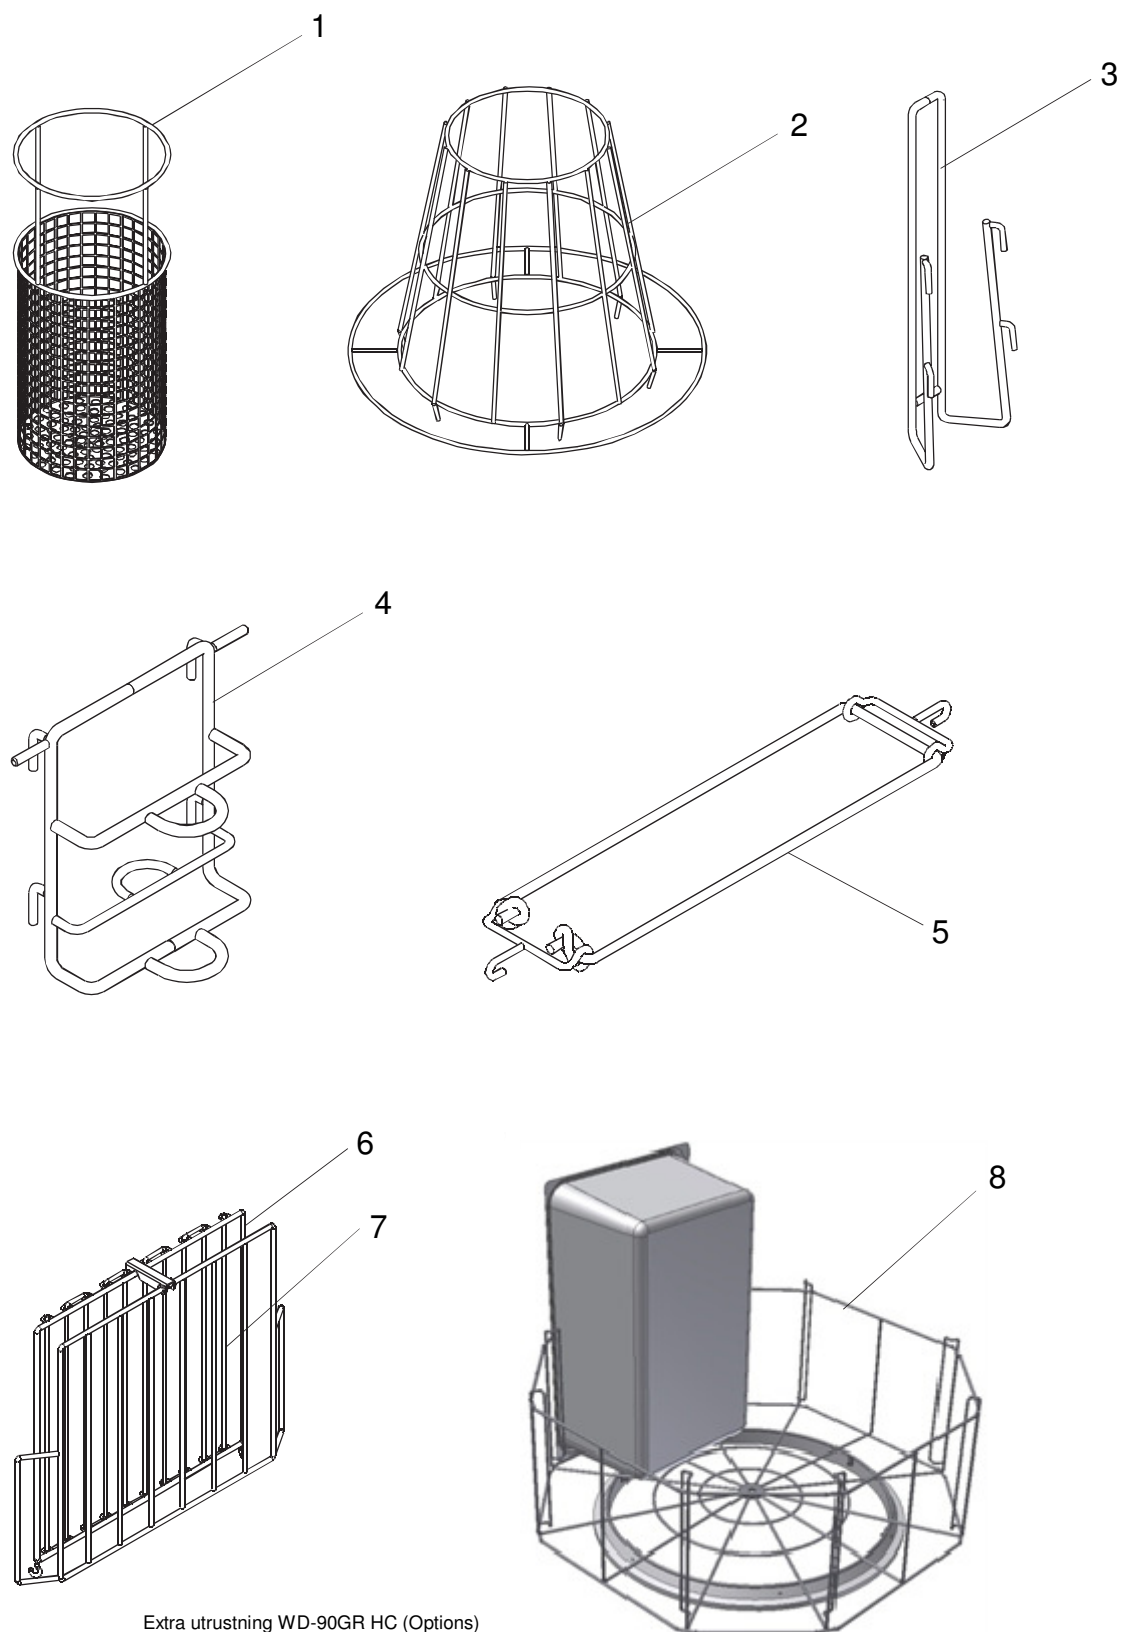


Extra utrustning WD-90GR HC (Options)

Spare parts

Extra equipment WD-90GR FLEX (optional)			
Item	WD no.	Description	Comment
1	WD209.7251	Utensil holder	
2	WD209.7252	Saucepan support	
3	WD209.7253	ABC canteen and lid holder	
4	WD209.7268	Saucepan holder	
5	WD209.7272	Rubber tensioner	
6	WD209.7283	Flexible insert, cpl	
7	WD809.0907	* Silicon rubber band	4.4 m
8	WD209.7287	Cassette for a maximum of four 1/1 gastronorm containers with a depth of 200 mm	

 1.29 Extra equipment WD-90GR FLEX/HC (optional)

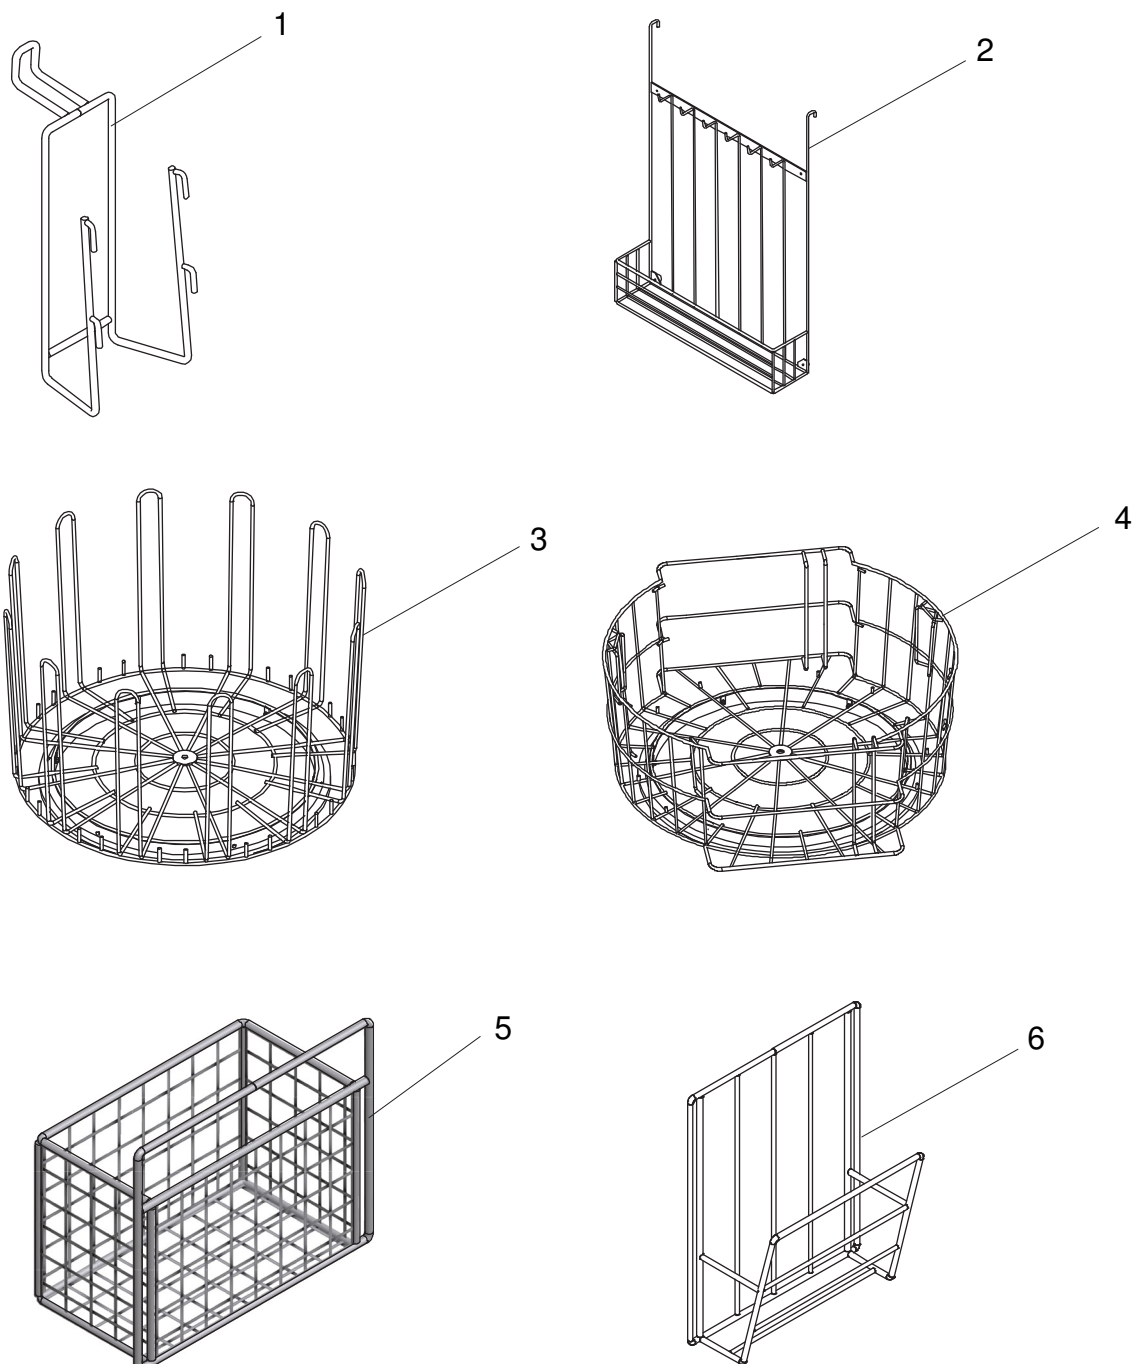


Extra utrustning WD-90GR FLEX_HC (Options)

Spare parts

Extra equipment WD-90GR FLEX/HC (optional)			
Item	WD no.	Description	Comment
1	WD209.7254	Pot holder for small pots	
2	WD209.7257	Utensil holder	
3	WD209.7259	Cassette for ABC canteens	
4	WD209.7275	Cassette for large plastic boxes	
5	WD209.7278	Mesh basket	
6	WD209.7279	Holder for small pans and bowls	

 1.30 Sorting bench and Cleaning gun with hose, Extra equipment WD-90GR FLEX/HC (optional)

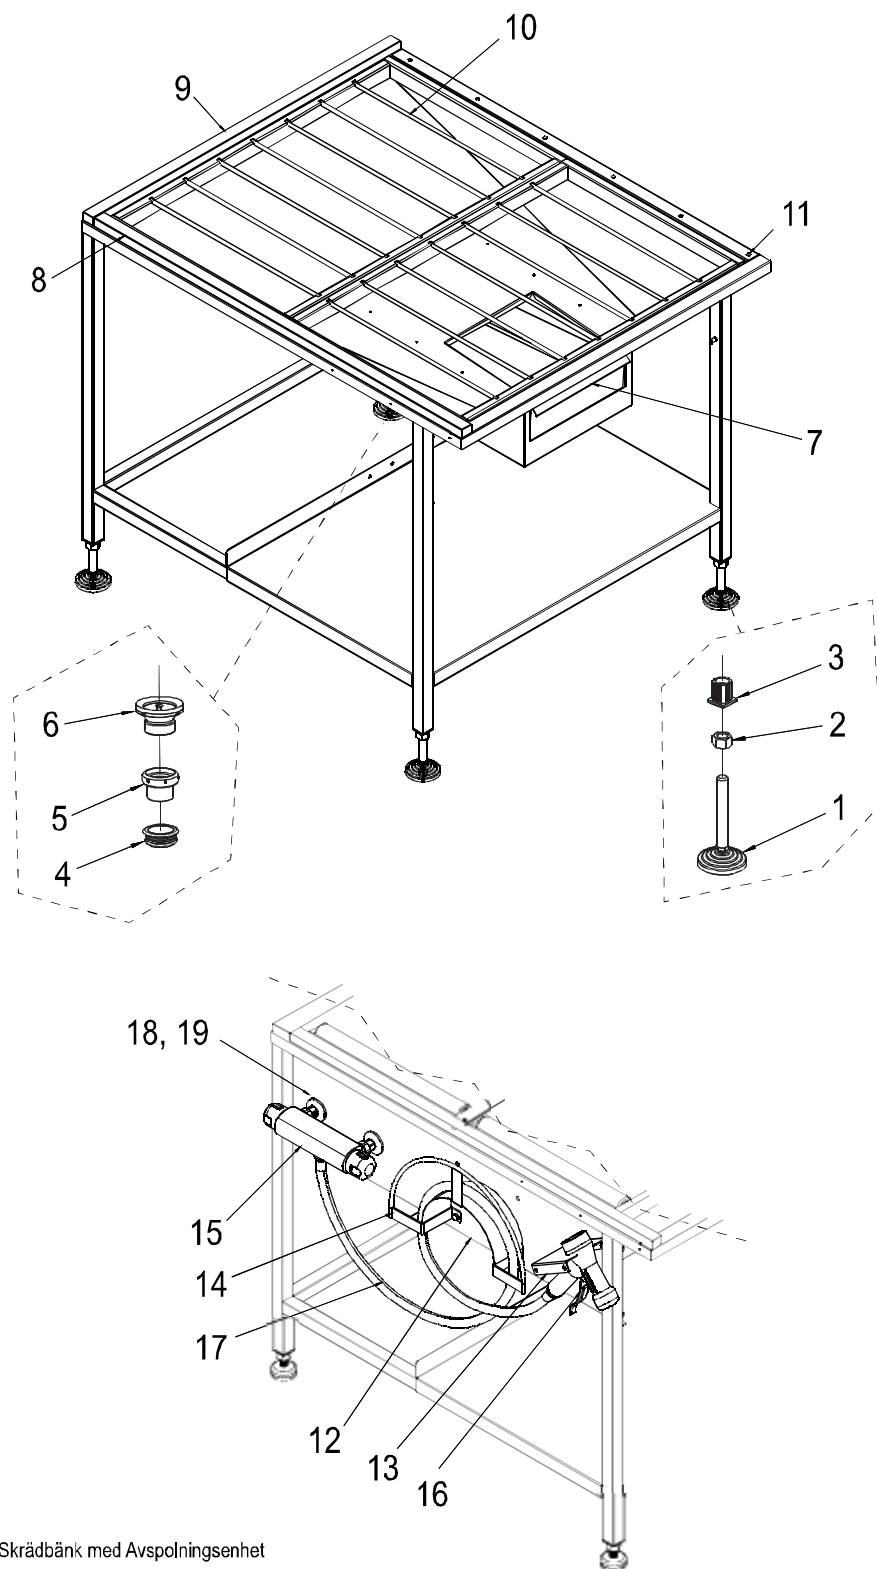


Skrädbänk med Avspolningsenhet

Spare parts

Sorting bench and Cleaning gun with hose, Extra equipment WD-90GR FLEX/HC (optional)			
Item	WD no.	Description	Comment
	WD209.7270	Sorting bench	
1	WD718.0507	Adjustable foot	
2	WD700.0909	Nut	
3	WD718.0508	Impact bushing	
4	WD726.0412	Rubber nipple	
5	WD726.0411	Connector	
6	WD726.0410	Waste valve	
7	WD39881.31	Filter	
8	WD306339.31	Plastic strip	
9	WD306338.31	Plastic strip	
10	WD300645.01	Grill	
11	WD718.1005	Blanking plug	
	WD209.7390	Cleaning gun with hose	
12	WD300307.31	Bracket for roller table	
13	WD38916.31	Holder	
14	WD301465.01	Hose holder	
15	WD715.0113	Sprayer mixer	
16	WD765.9060	Pistol spray	
17	WD765.9011	Hose with couplings	
18	715.0108	Connection coupling	
19	WD706.0203	Nut	

 1.31 Trolley, Extra equipment WD-90GR FLEX/HC (optional)

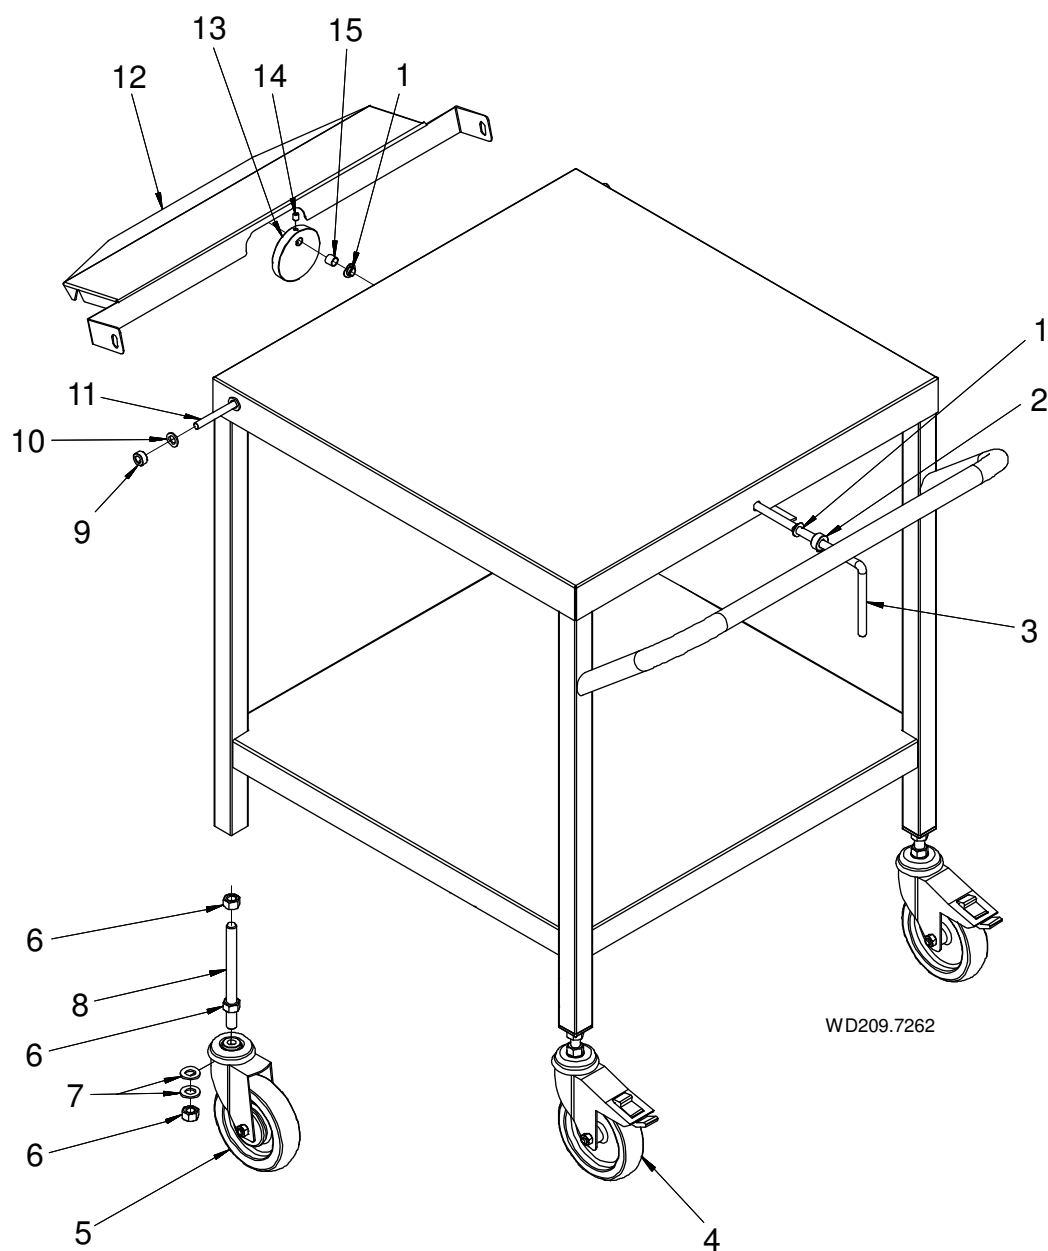

Spare parts

Trolley, Extra equipment WD-90GR FLEX/HC (optional)			
Item	WD no.	Description	Comment
	WD209.7262	Trolley	
1	WD710.0134	Plain bearing	
2	WD701.2010	Collar	
3	WD301398.31	Turning arm	
4	WD731.0208	Swivel wheel with brake	
5	WD731.0207	Swivel wheel	
6	WD700.0907	Nut	
7	WD700.1209	Washer	
8	WD45782.31	Rod	
9	WD701.2008	Collar	
10	WD701.0114	Washer	
11	WD27215.39	Rod	
12	WD301393.31	Flap	
13	WD46077.31	Eccentric	
14	WD700.0310	Screw	
15	WD27215.45	Eör	